



Philips
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

DivX Plus HD
USB2.0 Media Link



BDP3290B



All-round Blu-ray Player

with small footprint and versatile placement

With the Philips Blu-ray player, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, while DVD upscaling offers near-HD video quality.

Versatile positioning

- Can be placed on a tabletop or mounted on a wall
- Vertical Positioning for aesthetic, space-saving players

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Full HD 1080p for razor sharp images

Engage more

- Enjoy all your movies and music from CD and DVD
- USB 2.0 plays video/music from USB flash/hard disk drive
- EasyLink to control all HDMI CEC devices via a single remote

Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out


PHILIPS

Blu-ray Disc/ DVD player
3D Blu-ray Disc playback DivX Plus HD, USB2.0 Media Link

BDP3290B/98

Highlights

Enjoy movies and music

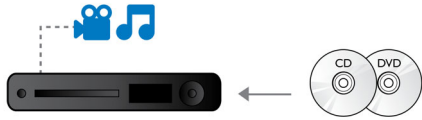

Enjoy all your movies and music from CD and DVD

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.


DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous


versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

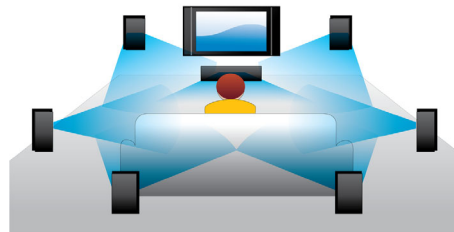

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

DVD video upscaling

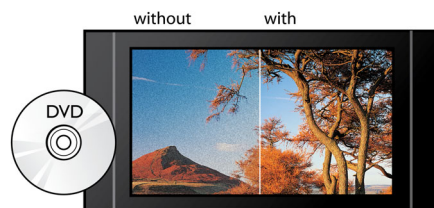

HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

Full HD 1080p



Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.



Specifications

Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Video Playback

- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front / Side connections: USB 2.0
- Rear Connections: Ethernet, HDMI output

Convenience

- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

Design

- Wall mountable

Power

- Power supply: 50/60 Hz, 110-240V
- Power consumption: < 10 W
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: 2 x AAA Batteries, HDMI cable, Remote Control, User Manual, AC/DC Adaptor, Power cord
- Wall mounting plate

Product dimensions

- Product dimensions (W x H x D): 21 x 5.25 x 21 cm
- Weight: 0.745 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 28.5 x 9 x 25 cm
- Gross weight: 1.354 kg
- Nett weight: 1.049 kg
- Tare weight: 0.305 kg
- EAN: 48 95185 62333 7

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 28.5 x 25 x 9 cm
- Gross weight: 1.354 kg
- Tare weight: 0.305 kg
- EAN: 48 95185 62333 7
- Nett weight: 1.049 kg



Issue date 2018-03-21

Version: 1.0.3

12 NC: 8670 001 37072
EAN: 48 95185 62333 7

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com