




Philips Philips Fidelio
SoundBar
Home theater

3D Blu-ray

Aluminium
Wall mountable

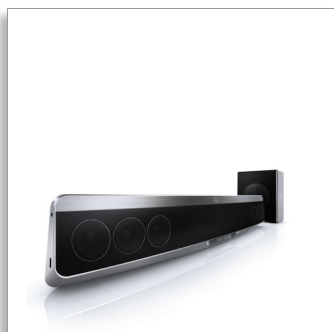

HTB9150

The slimmest SoundBar with Ambisound yet

Obsessed with sound

Delivering truly immersive surround sound without the constraint of your position, room size or shape, this Philips Fidelio Ambisound home theater system has six precisely angled drivers to create a more embracing surround sound effect.

Designed to enhance your living space

- Super slim design of 87mm depth ideal for wall mounting
- Sophisticated design with high quality aluminum finishing
- SoundBar design best fitting a 102cm (40") flat TV or larger

Connect and enjoy all your entertainment

- Built-in Wi-Fi to enjoy your connected media wirelessly
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Internet radio to enjoy the world of online radio channels
- Instant 2D to 3D conversion for a lifelike movie experience
- Turn your Smartphone into a remote for Philips AV products


Ultimate listening experience

- 600W RMS power delivers great sound for movies and music
- Ambisound technology for surround sound from fewer speakers
- Voice Clarity enhancer for true-to-life voices

PHILIPS
Fidelio

Highlights

Ambisound technology

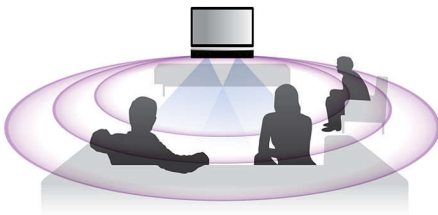

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

Internet radio

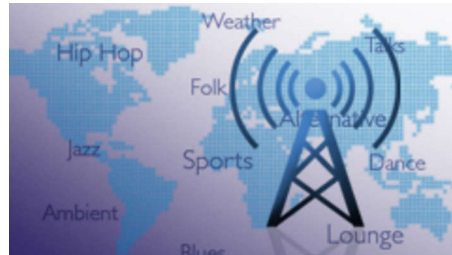

Internet radio is an audio broadcasting service that is transmitted via the Internet. Some internet stations are affiliated with a traditional (terrestrial) radio station or network while others are internet-only radio stations, which are independent and devote their broadcasts only to the World Wide Web. With Internet Radio, you can enjoy access to online radio stations from anywhere in the world and listen to a wide variety of genres, news, sports and entertainment updates, or connect to favourite or niche stations.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

600W RMS power



600W RMS power delivers great sound for movies and music

SoundBar design (102cm (40"))



The Philips soundbar lends an air of sophistication and grace to any living room. Though the soundbar is designed to fit a flat TV with a 102 cm (40") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle for a stylish home theatre experience.

Specifications

Sound

- Philips Branded feature: Ambisound
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble and Bass Control, Voice Clarity Enhancer
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Subwoofer output power: 120 W
- Equalizer settings: MySound, Gaming, Movie, Music, News, Original
- Center speaker output power: 2 x 60 W
- Surround speaker output power: 4 x 90 W
- Total Power RMS @ 30% THD: 600 W

Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated center speakers, 4 Integrated surround speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 8 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Subwoofer impedance: 4 ohm
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 6 ohm

Connectivity

- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- iPod/iPhone: Ready (Dock sold separately), via 3.5mm Music iLink
- MyRemote App: MySound, SimplyShare, Virtual Remote
- Side Connections: Music iLink, USB

Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Power

- Power consumption: 85 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.25 W

Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 927 x 150 x 87 mm
- Weight incl. Packaging: 15.5 kg
- Main Unit Weight: 5 kg
- Packaging (W x H x D): tbc mm
- Subwoofer (W x H x D): 196 x 396.5 x 300 mm
- Subwoofer Weight: 4.79 kg
- Subwoofer cable length: 4 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: aac, mka, mp3, ra, wma
- Video: asf, avi, divx, flv, mkv, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: Electronic User Manual

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB

