




Philips
Portable DVD Player

18cm/ 7" LCD



PET7432

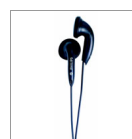

Double your movies on the road with two widescreen LCDs

Play your movies and music in car! The PET7432 portable DVD player features two 7" LCD screens for your great viewing experience. It comes with full set accessories for your great convenience. Install and mount easily for in-car enjoyment.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc
- DivX Certified for standard playback of DivX videos

Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Expand movie enjoyment with dual TFT LCD screens
- Built-in stereo speakers

Extra touches for your convenience

- Up to 2-hour playback with rechargeable built-in battery*
- Smart Car Mount for ease-of-use
- Travel bag included
- 2 sets of earphones included for personal enjoyment
- AC adaptor, car adaptor and AV cable included

PHILIPS

Highlights

18 cm/7" TFT color LCD (16:9)



The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

DVD, DVD+/-RW, (S)VCD, CD



The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for

a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the

portable DVD player with you, leaving just the Mount behind in the car.

Dual TFT LCD display screens



Dual screens allow you to display same videos or images from the portable DVD players. Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favorite DVD movies and JPEG photos with family and friends at the backseats easily and comfortably.

DivX Certified



With DivX[®] support, you are able to enjoy DivX[®] encoded videos. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 7 inch
- Brightness: 120 cd/m²
- Resolution: 480(w)x234(H)x3(RGB)
- LCD panel type: Anti-glare polarizer
- Contrast ratio (typical): 200:1
- Effective viewing area: 154.1x86.6mm
- Response time (typical): 30 ms

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Shuffle Play
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 1A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adaptor: 9V, 1A, (110-240v, 50/60Hz)
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adaptor, 12vDC

- Remote control: AY5521 (credit card style)
- User Manual: Multi Languages
- Second LCD screen: 7" TFT LCD x 1 pcs
- Headphones: AY3822 x 2
- Smart car mount: AY4246 x 2
- Pouch: Travel bag x 1

Power

- Battery lifetime: Up to 2hrs*
- Battery Type: Built-in battery

Dimensions

- Master carton dimensions: 325 x 305 x 370 mm
- Master carton weight: 10 kg
- Master carton quantity: 3
- Packaging dimensions (W x H x D): 360 x 295 x 105 mm
- Product dimensions (W x H x D): 199 x 38 x 153 mm
- Product weight: 1.2 kg
- Packaging type: D-box

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 29.5 x 10.5 cm
- EAN: 87 12581 46963 4
- Gross weight: 2.38 kg
- Nett weight: 1.87 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.51 kg

Outer Carton

- EAN: 87 12581 46964 1
- Gross weight: 7.56 kg
- Outer carton (L x W x H): 37 x 32.5 x 30.5 cm
- Nett weight: 5.61 kg
- Number of consumer packagings: 3
- Tare weight: 1.95 kg



Issue date 2017-04-05

Version: 3.2.5

12 NC: 8670 000 50553
EAN: 87 12581 46963 4

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.