




Philips
Noise-cancelling
headphones

32-mm drivers/closed-back
On-ear
Compact folding

SHL3850NC

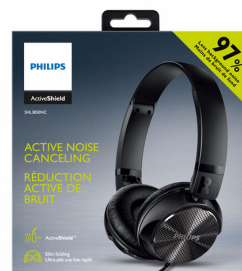

More sound, less noise

powerful bass

Be immersed in your music with innovative ActiveShield™ active noise cancelling technology. Pressure-relieving cushions provide long-wearing comfort and a compact foldable design is ideal for portability and easy storage.

Art of Noise Cancellation

- ActiveShield™ noise cancelling reduces noise by up to 97%

Powerful sound

- 32 mm neodymium speaker drivers for rich bass
- Closed-back design blocks out noise for noise isolation

Make life more convenient

- Slim and compact foldable design for easy portability

PHILIPS

Noise-cancelling headphones
32-mm drivers/closed-back On-ear, Compact folding

Highlights

32 mm high-definition drivers



Finely tuned 32 mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide rich bass.

Closed-back design



Tuned 32 mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide an excellent and impressive precision sound.

Compact folding



Slim and compact foldable design for easy portability on the go.

ActiveShield™



ActiveShield™ active noise-cancelling technology features two feed-backward microphones used for cancelling low frequencies. It detects ambient noise and inverts the sound wave, effectively cancelling it out and converting background noise to silence.

SHL3850NC/00

Specifications

Sound

- Acoustic system: Closed
- Frequency response: 10 - 22,000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 30 mW
- Sensitivity: 105 dB
- Speaker diameter: 32 mm

Connectivity

- Cable length: 1.2 m
- Cable Connection: one-sided
- Connector: 3.5 mm

Power

- Music play time: 40* hr
- Standby time: 50* hr
- Battery type: AAA

Outer Carton

- Gross weight: 2.161 lb
- Gross weight: 0.98 kg
- GTIN: 1 69 25970 70556 8
- Outer carton (L x W x H): 20.3 x 16.2 x 21.6 cm
- Outer carton (L x W x H): 8.0 x 6.4 x 8.5 inch
- Net weight: 1.157 lb
- Net weight: 0.525 kg
- Number of consumer packages: 3
- Tare weight: 0.455 kg
- Tare weight: 1.003 lb

Packaging dimensions

- Packaging dimensions (W x H x D): 19.5 x 20 x 5 cm
- Packaging dimensions (W x H x D): 7.7 x 7.9 x 2.0 inch
- EAN: 69 25970 70556 1
- Gross weight: 0.282 kg
- Gross weight: 0.622 lb
- Net weight: 0.386 lb
- Net weight: 0.175 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.236 lb
- Tare weight: 0.107 kg
- Type of shelf placement: Both



Issue date 2017-01-15

Version: 8.0.10

12 NC: 8670 001 27503
EAN: 69 25970 70556 1

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com