


Philips  
Soundbar speaker

### Virtual surround

External subwoofer  
Opt, Coax, Aux in, Audio in

CSS2115

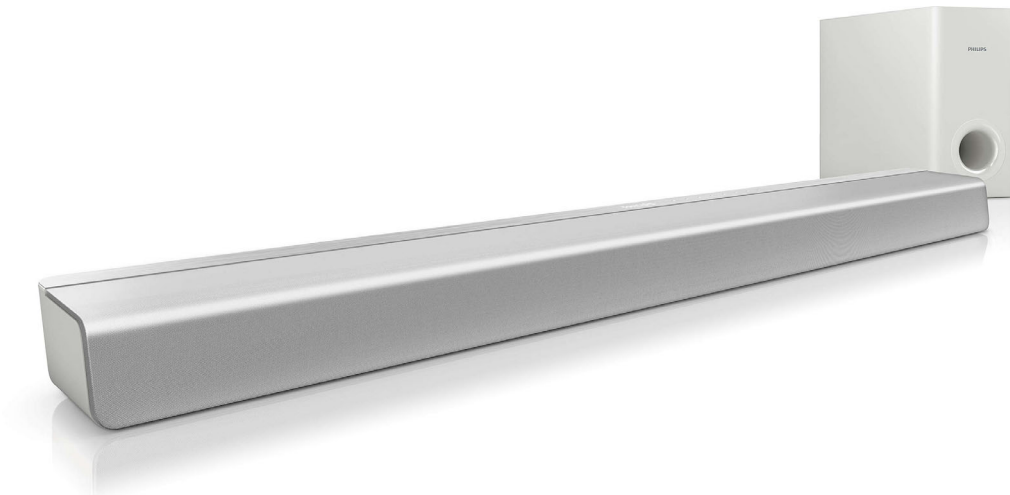

## Powerful sound for any TV

with subwoofer

Don't judge by its size, because this small soundbar packs a lot of punch! No more muffled dialogues with 2 dedicated tweeters. DoubleBASS and Virtual Surround Sound technology add excitement and surround sound to the movie.

#### Connect and enjoy all your entertainment

- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy music from iPod/iPhone/iPad with Music iLink

#### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Ultra-compact soundbar—just 70 cm/28" wide


#### Richer sound for watching TV and movies

- DoubleBASS technology for fuller and deeper bass
- Virtual Surround Sound for a realistic movie experience
- Separate subwoofer adds a thrill to the action
- Dolby Digital for ultimate movie experience

# PHILIPS


# Highlights

## Virtual Surround Sound

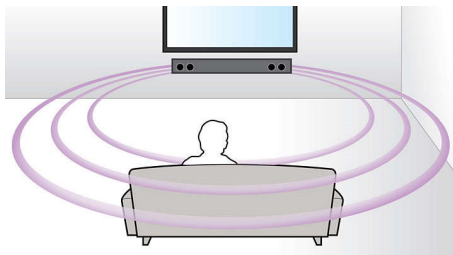

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Dolby Digital

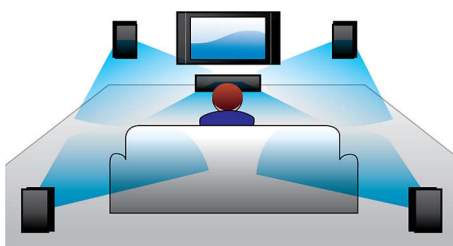

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb

quality surround sound audio with realistic spatial cues.

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

## Music iLink



Philips Music iLink allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home theatre. Simply

connect your audio device to the Music iLink jack to enjoy your music with the superior sound quality of the Philips home theatre.

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV

## Separate subwoofer

Separate subwoofer adds a thrill to the action

## Ultra-compact soundbar

Ultra-compact soundbar—just 70 cm/28" wide

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

# Specifications

## Sound

- Sound Enhancement: DoubleBass, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital
- Subwoofer output power: 30 W
- Speaker output power: 15 W x 2
- Total Power RMS @ 30% THD: 60 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 20–150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Speaker Drivers per side: 1 x 5" woofer, 1 x 1.5" Mylar tweeter
- Speaker Impedance: 4 ohm

## Connectivity

- Front/Side connections: Music iLINK
- Rear Connections: AUX IN 1, Digital coaxial in, Digital optical in, Subwoofer out

## Power

- Power consumption: 20 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

## Accessories

- Compatible accessories: Screw x 2, Wall plug x 2
- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 708 x 47 x 65 mm
- Weight incl. Packaging: 5.4 kg
- Main Unit Weight: 1.03 kg
- Packaging (W x H x D): 756 x 395 x 220 mm
- Subwoofer (W x H x D): 165 x 295 x 240 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3.3 m

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 8.3.5

EAN: 87 12581 64060 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)