


Philips  
Micro music system

**Bluetooth®**  
CD, MP3-CD, USB, FM  
USB port for charging



**BTM2310**

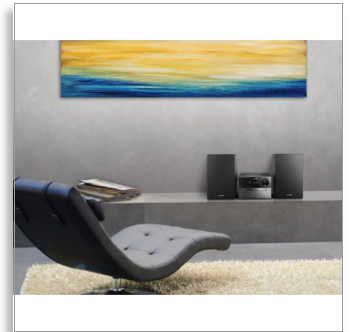

# Relax to great music

Obsessed with sound

Listen to your smartphone tunes, stream your music library over Bluetooth and play MP3-CDs on this compact, all-in-one Philips music system. Charge all your smart devices, from smartphones to tablets with the built-in USB charging port.

#### **Enrich your sound experience**

- 15W maximum output power
- Digital Sound Control
- Bass Reflex Speaker System delivers a powerful, deeper bass

#### **Enjoy your music from multiple sources**

- Wireless music streaming via Bluetooth
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback
- USB Direct for easy MP3 music playback

#### **Easy to use**

- Motorized CD loader for convenience access
- Digital tuning with preset stations for extra convenience

# PHILIPS

Micro music system  
Bluetooth® CD, MP3-CD, USB, FM, USB port for charging

# Highlights

## Wireless music streaming



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides

the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

BTM2310/37

# Specifications

## Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 15W

## Loudspeakers

- Speaker drivers: 3" woofer
- Speaker types: bass reflex speaker system

## Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM fixed pigtail antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

## Connectivity

- USB: USB host
- Audio in (3.5mm)
- Bluetooth profiles: A2DP

## Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: tray

## Accessories

- Included accessories: AC Power Cord, FM antenna, User Manual
- Remote control: 21-key remote

## Dimensions

- Main unit width: 180 mm
- Main unit height: 121 mm
- Main unit depth: 247 mm
- Main speaker dimensions (W x D): 150 x 125 mm
- Main speaker height: 238 mm
- Packaging width: 577 mm
- Packaging height: 312 mm
- Packaging depth: 185 mm
- Gross weight: 4.5 kg
- Net weight: 3.55 kg

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2022-05-16

Version: 1.0.1

12 NC: 8670 001 64421  
UPC: 8 40063 20058 6

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)