



Philips  
Portable Radio

**DAB+**  
FM digital tuner  
Headphone jack  
Battery or AC operated

**AE5600W**

## Enjoy your favourite radio

with one-touch access to pre-set stations

Enjoy your favourite DAB/FM stations with just a touch with Philips portable radio. Digital tuning and three one-touch presets make this radio easy to use. The large backlit LCD display provides easy viewing even in low light.

### Enjoy your favourite stations

- Digital tuning with preset stations for extra convenience
- Stereo headphone jack for better personal music enjoyment
- DAB and FM compatible for a complete radio experience
- Built-in speaker to enjoy radio out-loud with a good sound

### Easy to use

- Built-in clock function
- Mains or battery operated for flexible placement
- Large backlit LCD display for easy viewing in low light
- Low battery indicator keeping you informed of power level
- Direct preset keys for quick access to stored radio stations

# PHILIPS

# Highlights

## Built-in clock


A built-in clock keeps time accurately. When the radio is off, the clock display comes on for added convenience.

## Large backlit LCD display



Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

## Built-in speaker

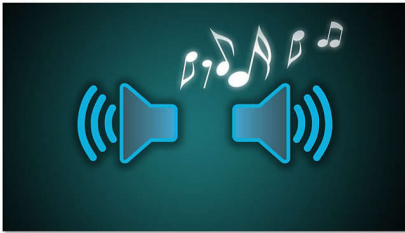

A speaker offers good sound quality for more pleasure.

## Digital tuning with presets



Digital tuning with preset stations for extra convenience

## Stereo headphone jack

Connect your own headphones with this Philips device for a more personal listening experience whenever you want it. You can enjoy your favourite music in great sound without disturbing others by connecting your headphones to this device.

## Low battery indicator



The low battery indicator lights up when the power is low.

## Mains or battery operated



Power your Philips radio set with batteries or a direct mains supply, and enjoy great

convenience and flexibility. When a power socket is not available or when you don't want unsightly wires trailing, simply operate the set with batteries. When you need a continuous and stable power supply, connect the set directly to a wall socket. Now you can truly enjoy the freedom of listening wherever you like.

## DAB and FM compatible



DAB (Digital Audio Broadcasting) digital radio is a new way of broadcasting radio, in addition to FM analogue transmission, via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear, crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

## Direct preset keys

Direct preset keys for quick access to stored radio stations



# Specifications

## Sound

- Output power (RMS): 3 W
- Volume control: rotary (digital)

## Design and finishing

- Colour: White

## Loudspeakers

- No. of built-in speakers: 1

## Connectivity

- Headphones: 3.5 mm
- Audio-in: 3.5 mm

## Tuner/Reception/Transmission

- Antenna: Rod
- Tuner bands: DAB (Band III), FM
- Station presets: 20
- DAB: info display, menu, smart scan
- Tuner enhancement: auto digital tuning

## Convenience

- Backlight colour: white

- Lines of text: 2
- Display type: LCD display

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 4
- Power supply: 220 - 240 V
- DC input voltage: 9 V

## Accessories

- Others: User Manual
- Cables/Connection: AC-DC adapter

## Dimensions

- Gross weight: 0.85 kg
- Master carton quantity: 4
- Main unit depth: 79 mm
- Main unit height: 186 mm
- Main unit width: 139 mm
- Product weight: 0.56 kg
- Packaging height: 214 mm
- Packaging width: 215 mm
- Packaging depth: 91 mm



Issue date 2024-03-24

Version: 1.0.3

EAN: 48 95185 60588 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)