

Philips 3000 series
DVD player

USB 2.0

DivX Ultra RMVB



DVP3670K

Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimized image quality

Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, RMVB, JPEG
- USB Media Link for media playback from USB flash drives

Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

Enjoy enhanced karaoke

- Karaoke Idol for interactive excitement and great fun
- Karaoke Record for sharing your singing talent with friends

PHILIPS

sense and simplicity

DVD player
USB 2.0 DivX Ultra RMVB

DVP3670K/98

Highlights

DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

USB Media Link

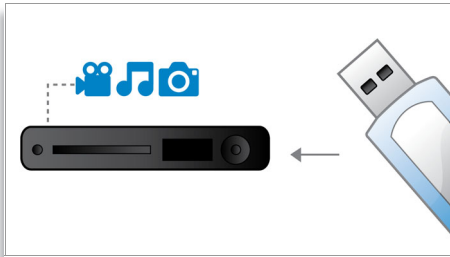

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Multimedia RMVB

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, RMVB, JPEG

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

Karaoke Idol


Add more fun and excitement to your karaoke sessions. Karaoke Idol allows two or more singers to compete against each other for the crown. Singers take turns singing and the Philips karaoke scoring system analyzes how well each singer performs. After each performance, the system displays a humorous cartoon showing what it thought of the singer's ability as well as a score. The singer with the highest score at the end of the game wins the title of Karaoke Idol!

Karaoke Record

Karaoke Record is an advanced feature that records your singing performance and


converts the file to MP3 format for playback on your portable media player. Simply plug your thumb drive or portable media player connected to a USB cable into the Philips DVD player's USB port. Your singing will be encoded in a compressed format, resulting in a space-saving MP3 file. Enjoy your own singing while on-the-go or share with your friends.

One-touch MP3 creation

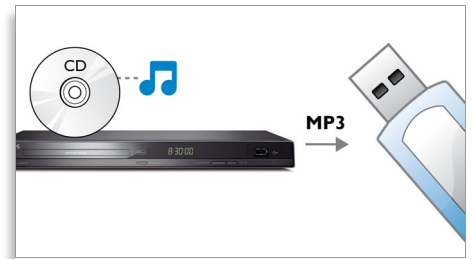

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

Progressive Scan

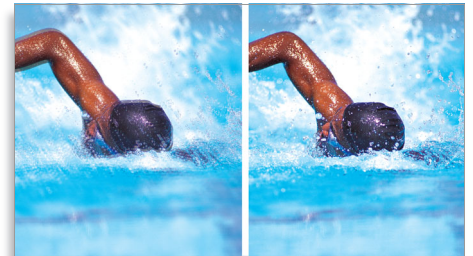

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

DivX
ULTRA

PROGRESSIVE
SCAN

DOLBY
DIGITAL

MP3-CD PLAYBACK

ProReader
Drive

KARAOKE

PICTURE
CD

DVD
VIDEO

Specifications

Product dimensions

- Product dimensions (W x H x D):
31 x 4,05 x 22,6 cm
- Weight: 1,05 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- EAN: 87 12581 67268 3
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- Tare weight: 0,35 kg
- EAN: 87 12581 67268 3
- Number of consumer packagings: 1

File Format

- Audio: mp3, wma
- Picture: JPEG, JPG
- Video: avi, divx, mp4, mpeg, mpg

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, RMVB
- Video disc playback system: PAL, NTSC

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

Still Picture Playback

- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom
- Compression format: JPEG

Audio Playback

- Compression format: MP3, WMA, PCM
- MP3 bit rates: 8 - 320 kbps
- WMA bit rates: 32 - 192 kbps

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control
- Advance functions: Scoring, Voice Cancellation

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Component Video output, Digital coaxial out
- Front Connections: Microphone In, USB 2.0

Convenience

- Child Protection: Parental Control, Child Lock

Power

- Power consumption: < 10 W
- Standby power consumption: < 1 W
- Power supply: 110-240V, 50/60 Hz

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 100 dB
- Distortion and Noise (1kHz): > 85 dB
- Crosstalk (1kHz): > 100 dB
- Dynamic Range (1kHz): > 90 dB
- Sound System: Dolby Digital

Accessories

- Included accessories: 1 x AAA Battery, Audio/Video cable, Quick start guide, Remote Control, Warranty Leaflet, World Wide Warranty leaflet, User Manual

Dimensions

- Product (W x H x D): 310 x 39.5 x 210 mm
- Product weight: 1.3 kg
- Packaging (W x H x D): 360 x 80 x 282 mm
- Weight incl. Packaging: 1.8 kg



Issue date 2013-02-12

Version: 2.1.3

12 NC: 8670 000 98975
EAN: 87 12581 67268 3

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com