

Philips  
DVD/SACD home theater  
system

HTS3500S



## See, hear, experience everything

This stylish and compact full digital home entertainment system plays practically any disc in high quality Dolby, DTS or SACD surround sound. So relax and fully immerse yourself in movies and music in your own personal environment.

### Great audio and video performance

- PAL & NTSC Progressive Scan gives razor-sharp images
- Dynamic Bass Boost for deep and dramatic sound
- Conical Dome Tweeters enhance SACD sound in high frequencies

### Play it all

- Movies: DVD, DVD+R/RW, (S)VCD, DivX, MPEG4
- Music: SACD, CD, MP3-CD, CD-R, CD-RW & Windows Media™ Audio
- Picture CD (JPEG) with music (MP3) playback

### Quick and easy set-up

- Easy set-up to initialize your total home entertainment
- Easy-fit™ connectors with color-coding for a simple set-up

### Your personal karaoke show

- Karaoke for endless singing entertainment

# PHILIPS

# Highlights

## **PAL & NTSC Progressive Scan**

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending fields with the odd lines to the screen first, followed by the fields with the even lines, both fields are written at one time. A flicker-free high resolution image is created giving you the best viewing experience.

## **Conical Dome Tweeters**

Conical Dome Tweeters enhance SACD sound at the highest frequencies by capturing every nuance and inflection of sound by using an extremely light and stiff membrane created of LEXAR, which allows the tweeters to deliver a higher range of audio frequency. The special cone shape of the reflector dish ensures a wider sound distribution of the higher

frequencies. This results in stunningly clear and crisp highs and an overall more balanced sound perception.

## **Multi-format Movies-DivX, MP4**

Multi-format playability allows you to play most disc formats for maximum compatibility and viewing pleasure.

## **Music:SACDWindows Media™ Audio**

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

## **Picture CD with MP3 Playback**

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the

DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.

## **Karaoke**

The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allows you to choose the optimal key for your personal vocal range.



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, 4x Video Upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz Hz
- Signal to noise ratio: >62 dB
- Sound System: Dolby Prologic II, DTS, Dolby Digital, Stereo
- Equalizer settings: Action, Classic, Concert, Digital, Drama, Jazz, Rock, Sci-Fi
- Output power (RMS): 4x75W (front+surround), 2x100W (center+subwoofer)
- Total Sound Power (RMS): 500 W
- Sound Enhancement: Class "D" Digital Amplifier, Dynamic Bass Enhancement

## Video Playback

- Playback Media: DVD-Video, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, Video CD/ SVCD, Picture CD, Super Audio CD, WMA
- Compression formats: MPEG1, MPEG2, MPEG4, DivX 3.11, DivX 4.x, DivX 5.x
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, MP3-CD, WMA, SACD Multichannel, SACD Stereo, CD-R, CD-RW
- Compression format: Dolby Digital, DTS, MP3, PCM, Windows Media™ Audio
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Slide show: with music (MP3)

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Auto digital tuning
- Auto store
- Number of Preset Channels: 20

## Connectivity

- Other connections: S-Video out, AUX in, Digital

coaxial in, Line out, FM Antenna, MW Antenna, Easy-Fit speaker connectors, Component Video out Progressive, Composite video (CVBS) out, TV in (audio, cinch)

## Convenience

- Remote Control: Multi-functional

## Power

- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Loudspeakers


- Satellite Speaker: Magnetically shielded front
- Satellite speaker freq range: 120-20000 Hz Hz
- Satellite speaker impedance: 6 ohm
- Satellite speaker drivers: 1" conical dome tweeter, 3" mid range woofer
- Center Speaker: Magnetically shielded
- Center freq range: 120-20000 Hz Hz
- Center speaker impedance: 3 ohm
- Center speaker drivers: 1" conical dome tweeter, 3" mid range woofer
- Subwoofer freq range: 30-120 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer driver: 6.5" high efficiency woofer

## Accessories

- Included accessories: AC Power Cord, FM/MW Antenna, Remote Control, Batteries for remote control, User Manual, Quick Use Guide, Warranty certificate, Audio/Video cable

## Dimensions

- Set dimensions (W x H x D): 360 x 54 x 324 mm
- Set weight: 2.7 kg
- Surround Speaker dimensions (W x H x D): 94 x 175 x 65 mm
- Surround speaker Weight: 0.58 kg
- Center speaker dimensions (W x H x D): 225 x 94 x 75 mm
- Center Speaker Weight: 0.78 kg
- Subwoofer dimensions (W x H x D): 360 x 340 x 130 mm
- Subwoofer Weight: 3.92 kg
- Packaging dimensions (W x H x D): 570 x 310 x 440 mm
- Weight incl. Packaging: 18 kg

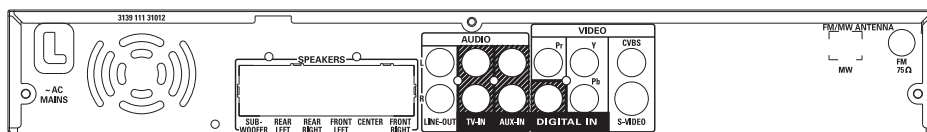

Issue date 2014-02-12

Version: 5.0.6

12 NC: 9073 100 12487  
EAN: 87 10895 87072 6

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)