



Philips  
Clock Radio

DAB



AJB4600

## Wake up to DAB or FM radio

Get clear DAB and FM with this Philips Clock radio. Find stations via digital tuning, and preset them as favorites. Automatic time synchronization sets the clock for you, giving the correct time once it is powered up, even after blackouts.

### Enjoy digital quality DAB radio

- Interference-free DAB radio
- FM digital tuning

### Easy to use

- Wake up to your favorite radio tune or a buzzer
- Auto time synchronization ensures accurate time without fuss
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- Sleep timer for easy falling asleep to your favorite music
- Upgradeable software via USB for staying up-to-date

**PHILIPS**

# Highlights

## Interference-free DAB radio



DAB (Digital Audio Broadcasting) digital radio is, on top of FM analog transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in crystal clear, crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can be find. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no returning on the move.

## FM digital tuning



FM digital tuning

## Wake up to radio or a buzzer



Wake up to sounds from your favorite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the


radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

## Auto time synchronization



With the automatic time setting function in your clock radio, you do not ever have to set the time. The clock synchronizes with radio signals automatically, even when it is switched off. It updates itself within one minute when there is an immediate need for adjustment, and makes routine synchronizations with radio signals to ensure it keeps accurate time always. From the first time you take the clock radio out of the box, to the time a power outage occurs, you can depend on your Philips product to give you the right time, fuss-free and reliably.

## Dual alarm

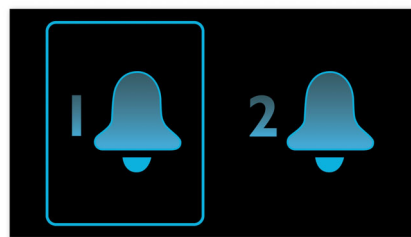

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

## Sleep Timer



Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.

# Specifications

## Tuner/Reception/Transmission

- DAB: Band III, Info display, Smart Scan, Menu
- Tuner Bands: FM
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna

## Sound

- Volume Control: Volume Control up/down
- Output power (RMS): 0.5W

## Loudspeakers

- Built-in speakers: 1

## Convenience

- Display Type: LCD
- Backlight color: bluish white

## Power

- Mains power

## Accessories

- Included accessories: User Manual, Quick start guide

## Dimensions

- Product dimensions (WxDxH): 150 x 165 x 52 mm
- Packaging dimensions (WxDxH): 219 x 61 x 158 mm
- Product weight: 0.4 kg
- Weight incl. Packaging: 0.773 kg



Issue date 2014-08-28

Version: 1.0.7

12 NC: 8670 000 90611  
EAN: 87 12581 64621 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)