




Philips
Digital PhotoFrame

17.8 cm (7")

16:10 frame ratio

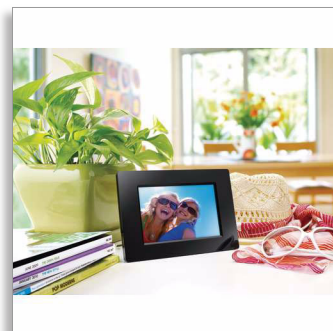

SPF1207

"...couldn't stop laughing that day!"

Keep your most memorable moments alive all year round with the Philips PhotoFrame. This compact frame is easy to use, has lots of storage memory and looks good in any home environment.

Top quality display for amazing viewing experience

- imagen Pro for sharp, vibrant and natural skin colours
- Add new glow to old memories with RadiantColor

Simple intuitive operation and great convenience

- Keep time with fun clocks
- Automatic slideshow from the memory card
- Quick easy menu for browsing, searching and organising

Green design

- Our packages are small to minimise materials used
- Auto on/off display at pre-set times for power saving

PHILIPS
sense and simplicity

Specifications

Picture/Display

- Viewing angle: @ C/R > 10
- Lifetime, to 50% brightness: 20,000 hr
- Aspect ratio: 16:10
- Panel resolution: 480 x 234
- Effective viewing area: 432 x 234 (13.9 x 8.7 cm)
- Brightness: 150 cd/m²
- Contrast ratio (typical): 500:1

Storage Media

- Built-in memory capacity: 128 MB (for 100 HD photos)
- Memory Card Types: Secure Digital (SD), Secure Digital (SDHC), Multimedia Card, Memory Stick, Memory Stick Pro

Convenience

- Card Reader: Built-in (1 x)
- Photo format supported: JPEG photo
- Placement: Landscape, Portrait
- Buttons and controls: 3 buttons
- Playback mode: Full screen browse, Slideshow, Thumbnail browse
- Regulatory approvals: CE, GOST

Accessories

- Included accessories: AC-DC Adapter
- User Manual: Dutch, English, French, German, Italian

Dimensions

- Set dimensions with stand (W x H x D):

- 206.4 x 139.3 x 103 mm
- Weight: 0.345 kg
- Temperature range (operation): 0°C to 40°C
- Temperature range (storage): -20°C to 70°C

Power

- Power supply: 100-240 VAC, 50/60 Hz
- DC output Volt: 5 V
- Power mode supported: AC powered
- DC output Ampere: 0.65 A
- Power consumption: 3 W

Packaging dimensions

- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 24.5 x 18.4 x 8.6 cm
- Net weight: 0.42 kg
- Gross weight: 0.612 kg
- Tare weight: 0.192 kg
- EAN: 87 12581 56522 0
- Number of products included: 1
- Packaging type: Carton

Outer Carton

- Outer carton (L x W x H): 25.3 x 18.2 x 19.8 cm
- Net weight: 0.84 kg
- Gross weight: 1.378 kg
- Tare weight: 0.538 kg
- GTIN: 1 87 12581 56522 7
- Number of consumer packages: 2

Highlights

Our packages are small

We make our packaging as small as possible to minimise materials used in production as well as fuel during transportation.

Keep time with fun clocks

Switch to the clock mode when you don't need to view photos. Instantly, your PhotoFrame become a clock.

Automatic slideshow startup

Slideshow of photos starts automatically once you insert the memory card.

imagen Pro for vibrant colours

The unique Philips imagen enhancement technology automatically analyses your photos to correct colour and adjust for optimal contrast. imagen Pro is a more advanced image enhancement which includes the 3 essential elements from imagen to have more colour accuracy, colour depth and smart contrast. On top of these, imagen Pro offers enhanced skin colour, sharper images and flicker-free photo viewing which is very important for still pictures.

RadiantColor

RadiantColor is an exclusive Philips technology for displaying smaller photos in the optimal 4:3 ratio by extending the colour on the edges of a less-than-full-screen photo to the sides of the screen, eliminating black bars and aspect ratio distortion.



Issue date 2012-05-08

Version: 1.2.7

12 NC: 8670 000 69002
EAN: 87 12581 56522 0

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com