

Philips Fidelio
SoundRing wireless
speaker

Surround yourself with natural, immersive audio

Obsessed with sound

Fill your room to capacity with wonderfully natural and immersive sound. This Philips Fidelio SoundRing wireless speaker takes music wirelessly from your iPod Touch, iPhone, iPad and computer's iTunes - and delivers it to your entire room.



DS3801W

Crystal clear sound

- SoundRing for all-around sound from a compact device
- FullSound enriches your music with fuller bass and clarity

Elegant and compact

- Compact design for any space, any lifestyle
- 360-degree design for gorgeous look from any angle

Advanced versatility


- Stream music with AirPlay wireless technology
- Play and charge your iPod/iPhone/iPad
- AUX-in for easy connection to almost any electronic device
- SoundStudio app for complete control of audio settings

PHILIPS
Fidelio

sense and simplicity


Highlights

SoundRing

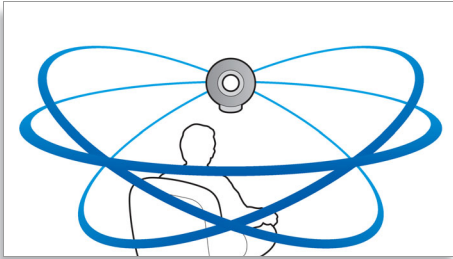

A truly distinctive design and engineered to provide room-filling sound. It comprises a central bass sound pipe and four high definition drivers - two front-firing and two side-firing drivers powered by Neodymium magnets, to radiate sound all around, for a great clarity throughout the whole room.

FullSound

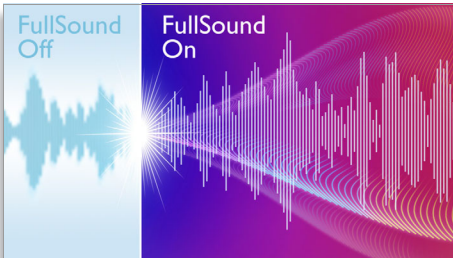

Philips' innovative FullSound technology faithfully restores sonic details to compressed music, dramatically enriching and enhancing it, so you can experience music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed music in true-to-life sound that will touch your soul and move your feet.

AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Philips Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

SoundStudio App



Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

Specifications

Compatibility

- Compatible with: all iPod touch, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later
- 7000+ Internet radio stations
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat,Pop,Rock,Jazz,Classic, FullSound™
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer

Sound

- Equalizer settings: Neutral
- Output Power: 16W RMS
- Sound Enhancement: Class "D" Digital Amplifier, Treble and Bass Control
- Equalizer: 5-bands

Accessories

- Included accessories: AC-DC Adapter, 3.5mm stereo line in cable, Warranty certificate, World Wide Warranty leaflet, Quick start guide
- User Manual: in CD

Connectivity

- AirPlay
- Aux in
- USB: for playing and charging only

Dimensions

- Product dimensions: (WxDxH) 197 x 114 x 193 mm
- Packaging dimensions (WxDxH): 208 x 198 x 178 mm
- Weight incl. Packaging: 1.6 kg
- Weight: 1.3 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Made for iPod iPhone iPad



Issue date 2013-01-22

Version: 3.3.4

12 NC: 8670 000 82165
UPC: 6 09585 22010 2

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com