



Philips  
Original radio mini

with 30-pin connector  
for iPod/iPhone  
FM, dual alarm  
4W



ORD2100C

## Set the trend with the Original Radio mini

Enjoy all your music and the appealing retro design of the Philips Original radio mini. Play from your iPod/iPhone, while the radio charges and auto synchronizes its clock with your Apple device.

### Enrich your sound experience

- Play and charge your iPod/iPhone simultaneously
- FM digital tuning
- Bass Reflex Speaker System delivers a powerful, deeper bass

### Easy to use

- Dock any iPod/iPhone, even in its case
- Free HomeStudio app for enhanced wake-up & radio experiences
- Auto clock synchronization with iPod/iPhone when docked
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- Sleep timer for easy falling asleep to your favorite music
- Audio-in for easy portable music playback

### Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

# PHILIPS

Original radio mini  
with 30-pin connector for iPod/iPhone, FM, dual alarm, 4W

ORD2100C/12

# Highlights

## Play & charge your iPod/iPhone



Enjoy your favorite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

## FM digital tuning



FM digital tuning

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off

of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

## Free HomeStudio app



There's no better way to wake up or listen to the radio than with the free Philips HomeStudio app. Simply download the app from the Apple App Store to enjoy a host of exciting features. Advanced alarm set up, for example, gives you greater flexibility in alarm settings - including alarm volume, duration, date and sound. You also get better user interface when you listen to the radio, with easy-to-use station preset functions.

## Auto clock synchronization




When connect and dock, this docking system will automatically synchronize the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Dual alarm

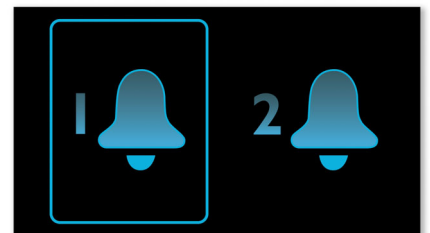

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.



# Specifications

## iPod compatibility

- Compatible with: iPod touch 4th generation, iPod touch 3rd generation, iPod touch 2nd Generation, iPod nano 6th generation, iPod nano 5th Generation, iPod nano 4th Generation, iPod classic, iPod with color display, iPod nano, iPod mini

## iPhone compatibility

- Compatible with: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

## iPod/iPhone App

- App name: HomeStudio, Free download from App store
- Compatibility: Dock radio for iPod/iPhone, iPod Touch, iPhone
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer
- Radio: FM radio, scan, tune, preset

## Audio Playback

- Playback mode: Charging iPod, Charging iPhone

## Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: (FM) 87.5-108 MHz
- Station presets: 20, via HomeStudio App
- Auto digital tuning

## Alarm

- No. of alarms: 2
- Alarm source: Dock, FM radio, Buzzer
- Snooze (repeat alarm): Yes, 9mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Connectivity

- Audio in (3.5mm)

## Convenience

- Display Type: LCD white
- Display brightness: High/ Mid/ Low

## Sound

- Sound System: Mono
- Volume control: rotary (digital)

## Loudspeakers

- Built-in speakers: 1

## Power

- Power type: AC input

## Dimensions

- Product dimensions (WxDxH): 245 x 133 x 122 mm
- Packaging dimensions (WxDxH): 336 x 158 x 183 mm

## Accessories

- Included accessories: User Manual, Warranty certificate



Issue date 2015-01-15

Version: 1.0.5

12 NC: 8670 001 01816  
EAN: 87 12581 68313 9

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)