

Philips Mini Hi-Fi System

120W

FWM197

# Obsessed with sound

Experience uninterrupted enjoyment of your CD/WMA/MP3 songs for up to 10 hours on the Philips Mini hi-fi system. Extend your music pleasure by listening to your tunes at home from your portable player - with MP3 link.

# **Enrich your sound experience**

- 120W RMS total output power
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings
- Digital Sound Control for optimized music style settings

# Continuous enjoyment of your favorite music

- Autostop cassette deck
- USB Direct for MP3/WMA music playback
- MP3 Link for portable music playback
- Digital tuning with preset stations for extra convenience
- Play MP3-CD, CD and CD-R/RW



# Highlights

## **120W RMS**




This system has 120W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

## **Bass Reflex Speaker System**



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Autostop cassette deck

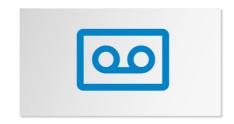

Autostop cassette deck

## **USB** Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

# **MP3** Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

# Digital tuning with presets



Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

## Play MP3-CD, CD and CD-R/RW



MP3 stands for "MPEG 1 Audio layer-7.6 cm (3") .MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.















# Specifications

#### Sound

- Sound enhancement: Dynamic Bass Boost, digital sound control
- Output power: 120 W RMS

## Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 2" tweeter, 5.25" woofer
- Loudspeaker enhancement: 2-way
- Speaker types: bass reflex speaker system

## **Audio playback**

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/ previous track search, repeat/one/all/program, repeat/shuffle/program
- · Number of decks: 1
- Cassette deck technology: mechanical
- Cassette Playback Modes: semi-auto stop
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

## **Audio recording**

- · Recording media: tape
- Tape recording enhancement: CD synchro start recording

## Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: FM stereo, MW
- Tuner enhancement: auto digital tuning, auto scan

### Convenience

Alarms: CD alarm, USB alarm

- Number of discs: 1
- · Clock: on main display, sleep timer
- · Loader type: tray
- Display type: LCD display

### Connectivity

- Aux in: 2xRCA (Audio)
- USB: USB host
- MP3 Link: 3.5mm stereo line in

#### **Accessories**

- · Remote control
- User Manual: multi-languages
- · Others: Quick start guide
- Warranty: World Wide Guarantee booklet

# **Dimensions**

- Gross weight: 11.2 kg
- Main unit depth: 285 mm
- Main unit height: 292 mm
- Main unit width: 220 mm
- Speaker height: 292 mm
- Speaker depth: 186 mm
- Packaging width: 730 mm
- Packaging height: 348 mm
- Packaging depth: 275 mm
- Speaker weight: 207 mm

#### Power

- Power supply: 50 Hz
- Power supply: 220 240 V

#### Groon

- Eco Power standby: 1 W
- Standby power consumption: < 2 W



Issue date 2014-02-05

© 2014 Koninklijke Philips N.V. All Rights reserved.

Version: 3.0.7

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 000 49722 EAN: 87 12581 46510 0

www.philips.com