



Philips
DVD micro music system

- with Lightning connector
- Bluetooth®
- HDMI



DTD3190

Relax with great music and movie

Obsessed with sound

Enrich music and movies, with this Philips DVD micro music system, even with wireless music streaming via Bluetooth, set your music free with details and the powerful bass of wOOx technology.

Enrich your sound experience

- Hi-Fi dome tweeter for detailed and natural sound
- wOOx™ loudspeaker Technology for deep and powerful bass
- 150W RMS maximum output power

Enjoy your favorite movies and music

- Fast charging and play music via Lightning connector
- Bluetooth wireless music streaming from your music devices
- HDMI 1080p upscales to high definition for sharper pictures
- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- HDMI ARC to access all the sound from your TV
- Karaoke for endless singing entertainment at home
- USB Direct for easy MP3 music playback

Easy to use

- FM digital tuning to preset up to 20 stations
- Motorized CD loader for convenience access

PHILIPS

DVD micro music system
with Lightning connector Bluetooth®, HDMI

DTD3190/98

Highlights

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Play DVD, VCD, MP3-CD, CD(RW) & Pict



The Philips player is compatible with most DVD and CD discs available in the market. DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, especially much more sharpen picture than a VCD because of the higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

HDMI ARC

HDMI ARC to access all the sound from your TV


wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer

than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

Bluetooth wireless streaming

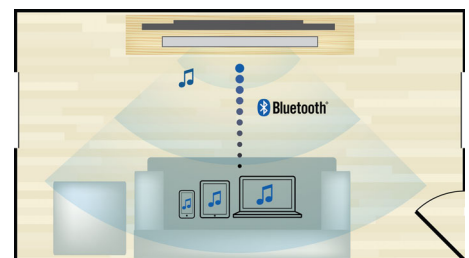

Bluetooth wireless music streaming from your music devices

Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to worry about the battery running out.



HDMI

DIVX

DVD
VIDEO

USB
DIRECT

Made for
iPod iPhone iPad

Specifications

Sound

- Sound Enhancement: Digital Sound Control
- Sound System: Dolby Digital
- Maximum output power (RMS): 150W

Loudspeakers

- Speaker drivers: Dome Tweeter with 4" woofer
- Loudspeaker types: Dome tweeter
- Main Speaker: 2 way, wOOx Bass Radiator

Video Playback

- Playback Media: DivX, DVD-Video, Picture CD, Video CD/SVCD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, Parental control, Disc Menu, Fast Backward, Fast Forward, OSD, Resume Playback from Stop
- DVD Region.: 3
- Video Enhancement: Progressive Scan, Video Upscaling

Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Fast Forward/Backward, Next/Previous Track Search
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Stop

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto Store
- Station presets: 20
- Antenna: FM antenna
- RDS: Program Type, Station Name

Connectivity

- HDMI 1: HDMI (Audio Return Channel)

- Video Output - Analog: Composite CVBS (yellow cinch)
- Bluetooth profiles: A2DP
- Audio Connections: Analogue Audio In (L/R)
- USB: USB host
- Microphone: Microphone socket
- Headphone: 3.5 mm

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Indications: DIM mode

Accessories

- Included accessories: Composite video cable (Y), AC Power Cord
- User Manual: Multi-languages
- Remote control

Dimensions

- Gross weight: 9.4 kg
- Main unit depth: 237 mm
- Main unit height: 195 mm
- Main unit width: 230 mm
- Main speaker dimensions (W x D): 139 x 230 mm
- Main speaker height: 304 mm
- Packaging depth: 360 mm
- Packaging height: 290 mm
- Packaging width: 514 mm
- Net weight: 8 kg

Power

- Power supply: 110-240V, 50/60 Hz

iPad compatibility

- Compatible with: iPad mini, iPad with Retina display

iPhone compatibility

- Compatible with: iPhone 5

iPod compatibility

- Compatible with: iPod nano 7th generation, iPod touch 5th generation



Issue date 2013-06-22

Version: 1.0.4

12 NC: 8670 001 01478
EAN: 87 12581 68197 5

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com