




Philips
docking speaker with
Bluetooth®

for iPod/iPhone
Battery/AC powered

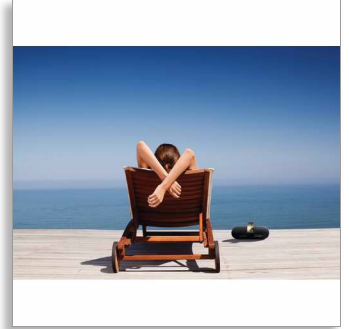

DS7530

Designed to go places

Obsessed with sound

Compact and extremely portable, this speaker is no lightweight when it comes to performance. Designed to travel it delivers sound from your iPod/iPhone that is surprisingly powerful and ensures convenience with wireless Bluetooth streaming.

Sound that blows you away

- wOOx technology for rich yet precise bass without distortion
- DBB to preserve low tones for deep bass at any volume level
- Shielding technology to block mobile phone interference
- 10W RMS total output power

Made to go places

- Elegant, slim and compact design to fit into any briefcase

Truly portable and versatile

- Battery or AC power option for music enjoyment anywhere
- Wireless music streaming via Bluetooth
- Dock any iPod/iPhone, even in its case
- AUX-in for easy connection to almost any electronic device
- Free DockStudio app for internet radio & other cool feature

PHILIPS

Specifications

iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch, iPod touch 2nd Generation, iPod touch 2nd Gen 8/16/32GB, iPod 5th Generation, iPod with color display

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

iPod/iPhone App

- App name: DockStudio, Free download from App store
- Compatibility: iPod Touch, iPhone, iPad iOS 4.3 or later
- 7000+ Internet radio stations
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer

Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10M or 30FT
- Bluetooth version: 2.1

Sound

- Output power (RMS): 10W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Volume Control: Volume Control up/down

Loudspeakers

- Neodymium magnet system

Power

- Power supply: 100-240VAC, 50/60Hz, Battery
- Battery type: AA size (LR6)
- Number of batteries: 4
- Operating time on battery: 10 hr

Dimensions

- Product dimensions (WxDxH): 311 x 38 x 111 mm
- Packaging dimensions (WxDxH): 431 x 76 x 163 mm
- Product weight: 0.28 kg
- Weight incl. Packaging: 1.08 kg



Highlights

wOOx technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

Dynamic Bass Boost (DBB)



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

