Enjoy

Start Recording

For DVD recording, press **DVD** — first. For VCR recording, press **VCR ()** first.

- 1 Insert a recordable disc (make sure the disc is compatible with this unit) or a cassette tape.
- 2 Press **REC MODE (**) to select a recording mode.
- 3 Press **SOURCE** repeatedly to select the appropriate external input channel to record from. (e.g. TUNER, E1, E2 or E3(DV-IN))
- To record a TV programme: Press **DTV/TV (**) to select analog TV or digital TV, then use CH + I - or the Number buttons to select a desired channel to record.
- 4 Press **REC (** to start recording. Press **REC (C)** again to make recording for 30 minutes. Press **REC** I repeatedly to extend the recording time by 30 minutes for each press.
- **5** Press **STOP ()** to stop the recording. You will need to finalize DVD+R, DVD-RW or DVD-R to play them back on other DVD players (refer to page 56 in the User Manual).

 $(\mathbf{\blacktriangleright})$

Start Playback

۲

- For DVD playback, press **DVD** first. For VCR playback, press **VCR** — first.
- 1 Insert a playable disc or a prerecorded cassette tape.
- **2** Press **PLAY D** to start playback.
- 3 Press STOP **(**) to stop playback.

To pause playback: Press PAUSE

To resume playback: Press **PLAY D**.

Need help?

User Manual See the user manual that came with your Philips recorder. Online

Go to www.philips.com/usasupport.

Hotline

Call 1-888-PHILIPS (1-888-744-5477) for our operators.



Types of Media Used on This Recorder

- * DVD-RW/-R recorded in VR mode or non compatible recording format are not playable.
- * DVD-RW recorded in the mode other than +VR is not recordable on this unit unless you erase all contents in the disc (refer to page 87 in the User Manual).
- DVD-R recorded in the mode other than +VR is not recordable on this unit.



Digital Video Disc Recorder & Video Cassette Recorder with Digital Tuner


Quick Start Guide



What's in the box?



Digital Video Disc Recorder & Video Cassette Recorder with Digital Tuner

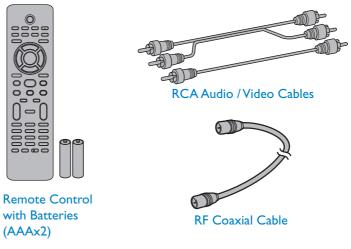




PHILIPS 2007 © Philips Consumer Electronics Company Marietta, GA 30006 0026 All rights reserved.

> Printed in China 12 NC 8239 300 56651 E9H90UD 1VMN23627

DVDR3545V/37



User Manual



Quick Start Guide



۲


Basic Connection

A Before Connecting

- 1 Disconnect the power cords of the devices from the AC outlet.
- 2 Disconnect RF coaxial cable from antenna input jack of your TV.

B Connecting

Make the connections as illustrated below.

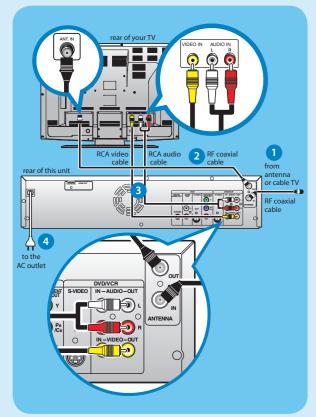

- Connect the RF coaxial cable from the TV antenna or cable TV to the ANTENNA IN jack of this unit.
- Use RF coaxial cable to connect ANTENNA OUT jack of this unit to the antenna input jack of your TV.

AND

- 3 Use RCA audio / video cables to connect the AUDIO / VIDEO OUT jacks of this unit to the audio / video input jacks of your TV.
- Plug in the power cords of the devices to the AC outlet.

RF Modulator Connection


If your TV has antenna in jack only, it is still possible to connect this unit to your TV by using a commercially available stereo audio / video RF modulator. In this case, follow the instructions below.

A Before Connecting

- 1 Disconnect the power cords of the devices from the AC outlet.
- 2 Disconnect RF coaxial cable from antenna input jack of your TV.

B Connecting

Make the connections as illustrated below.

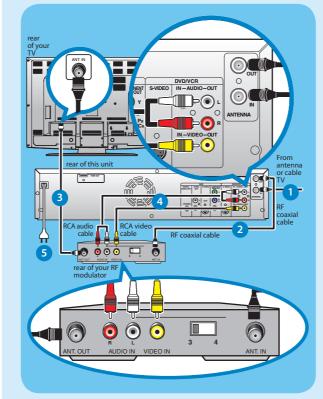

- Connect the RF coaxial cable from the TV antenna or cable TV to the ANTENNA IN jack of this unit.
- Use RF coaxial cable to connect ANTENNA OUT jack of this unit to the antenna input jack of your RF modulator.
- 3 Use RF coaxial cable to connect antenna output jack of your RF modulator to the antenna input jack of your TV.
- Use RCA audio / video cables to connect the AUDIO / VIDEO OUT jacks of this unit to the audio / video input jacks of your RF modulator.
- 5 Plug in the power cords of the devices to the AC outlet.
- * RF modulator is not supplied with this unit. You need to purchase it at your local store.

Connection to a Cable / Satellite Box


If you have a Cable / Satellite Box, follow the instructions below.

A Before Connecting

- Disconnect the power cords of the devices from the AC outlet.
- 2 Disconnect RF coaxial cable from antenna input jack of your TV.

B Connecting

Make the connections as illustrated below.

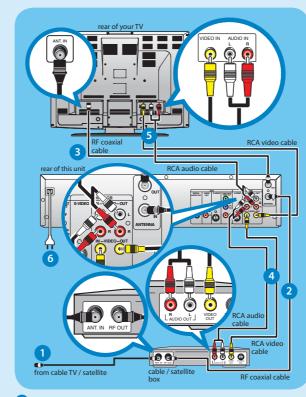

- Connect the RF coaxial cable from the cable TV / satellite to the antenna input jack of your cable / satellite box.
- Use RF coaxial cable to connect the RF output jack of your cable / satellite box to ANTENNA IN jack of this unit.
- 3 Use RF coaxial cable to connect ANTENNA OUT jack of this unit to the antenna input jack of your TV.
- Use RCA audio / video cables to connect the audio / video output jacks of your cable / satellite box to the AUDIO / VIDEO IN jacks of this unit.
- Use RCA audio / video cables to connect the AUDIO / VIDEO OUT jacks of this unit to the audio / video input jacks of your TV.
- 6 Plug in the power cords of the devices to the AC outlet.
- * Refer to the user manual for other connection methods.

Basic Setup

A Finding the Viewing Channel

1 Press **STANDBY-ON** (1) to turn on the unit.

- **2** Turn on your TV.
- If connected to your VCR, make sure it is switched off or in standby mode before proceeding.

Press "2" on the TV's remote control, then press channel down button repeatedly until you see the "Initial Setup" menu. This is the correct viewing channel (external input channel) for the recorder.

OSD Language
English
Français
Español

* Refer to your TV's user manual for details.

B Initial Setting

- Use ▲ / ▼ to select your desired language, then press OK .
- 2 Use ▲ / ▼ to select the type of broadcasting signal, then press OK .



The unit will start getting channels available in your area.

Antenna:

 (\mathbf{l})

PHILIPS

(When using antenna)

The channels broadcasted in analog TV and digital TV are automatically scanned and memorized. Only the receivable channels in the area will be memorized. Cable (Analog):

(When using basic cable)

The channels broadcasted in analog CATV are automatically scanned and memorized. Cable (Analog / Digital): (When using basic cable)

The channels broadcasted in analog CATV and digital CATV are automatically scanned and memorized.

3 Press OK <a> to activate "Clock Setting".

Clock Setting
/ / ()

Use
↓ to select an item to set, and use
▲ / ▼ to select the contents to suit your preference, then press OK
when you finish setting all the contents.

Your Philips recorder is now ready for use!

A