

Philips
Car infotainment system

- 6.5" touch screen
- navigation
- Bluetooth

CID3610



Super clear display for video and navigation

with a high resolution LCD

Drive in style with the Philips Car entertainment system CID2680. Featuring a 16.5 cm (6.5") full colour display with touch panel, built-in navigation system and Bluetooth® for calls and music streaming. The long road ahead just got more enjoyable.

Enrich your AV entertainment experience

- 20.3 cm (8") TFT LCD for a comfortable viewing experience
- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback
- AV-IN for portable video and music playback

Guides you to your destinations with ease

- Built-in navigation system with pre-installed map of China
- Rich POIs for quick destination search

Superb performance with full features

- Built-in 50 W x 4 amplifiers for excellent sound quality
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- Rear-view camera mode for safety when reversing
- Dual video outputs for entertainment in rear seats

PHILIPS


Highlights

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

USB Direct and SDHC card slots

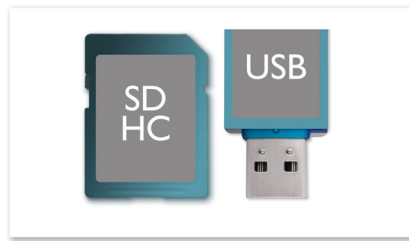

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving so you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.



Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 8"
- Resolution: 800 x 480 pixels
- Aspect ratio: Widescreen
- Key illumination: Blue, Red

Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD, USB flash drive
- Disc Playback Modes: A-B Repeat, Angle, Chapter repeat, Disc Menu, Fast Reverse, Fast Forward, OSD, PBC, Repeat, Resume Playback from Stop, Search forward/reverse, Slow Reverse, Slow Forward, Still Picture, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: DivX 4.x, DivX 5.x, DivX 6.0, MPEG4

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA, WMA9
- Disc Playback Modes: Fast Forward/Reverse, Introscan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320 kbps and variable bit rate
- USB Direct/SD Modes: Play/Pause, Fast Reverse/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning

- Tuner Enhancements: Auto search and store
- No. of preset stations: 18 (FM), 12 (AM)

Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50 W x 4 Channels
- Output power (RMS): 22 W x 4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- Microphone: Built-in microphone
- Video Output - Analogue: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: With gain control
- AV input: Composite (CVBS) x 2
- Bluetooth profiles: A2DP, AVRCP, Hands-free
- Bluetooth version: 2.0
- Parking camera input: Yes (Switched on automatically when the car is in reverse)

Security/Anti-theft

- Display blackout: 10/20 sec selectable

Accessories

- User Manual: Simplified Chinese, Traditional Chinese
- Quick start guide: Simplified Chinese

Power

- Power supply: 12 V DC



Issue date 2013-05-10

Version: 1.1.3

12 NC: 8670 000 76722
EAN: 87 12581 60446 2

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com