




Philips
DVD player

HDMI 1080p
USB 2.0
DivX Ultra
CinemaPlus

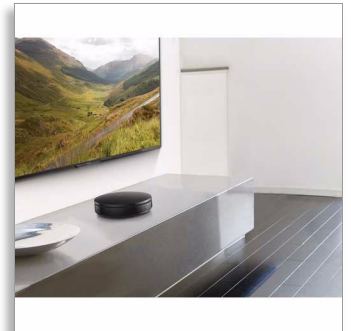

DVP2980

All-Round DVD Player

with HDMI 1080p upscaling

The Philips DVP2980 DVD player supports most major disc formats, allowing you to enjoy maximum playability of your favourite entertainment. With its unique round and home-fit design, it can fit into any room you want.

Bring audio and video to life

- CinemaPlus for better, sharper and clearer images
- HDMI 1080p upscales to high definition for sharper pictures
- Screen Fit for optimal viewing every time

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc


Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

PHILIPS

Highlights

CinemaPlus

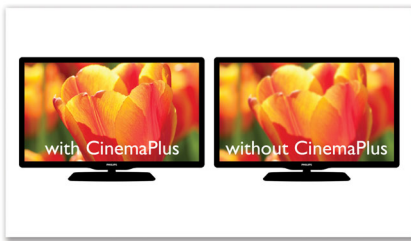

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analysing it before optimising sharpness and colour stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

DivX Ultra Certified

With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus in one convenient file format.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality

between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG


ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged.


Using state-of-the-art technology, ProReader Drive converts weak analogue signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

Screen Fit

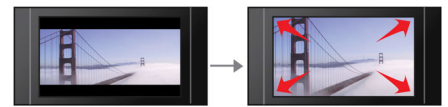

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

USB Media Link

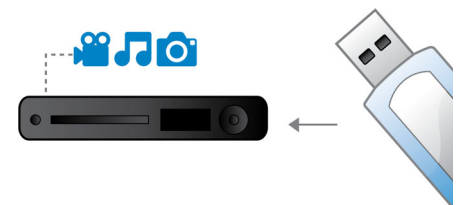

The Universal Serial Bus, or USB, is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Specifications

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, DivX, mpeg, mpg

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

Audio Playback

- Compression format: Dolby Digital, MP3, PCM, WMA
- MP3 bit rates: 8 - 320 kbps
- WMA bit rates: 32 - 192 kbps

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling (720p, 1080i/p)

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output

Convenience

- Child Protection: Child Lock, Parental Control

Power

- Power consumption: < 11 W
- Power supply: 220-240 V, 50/60 Hz
- Standby power consumption: < 0.5 W

Sound

- Crosstalk (1 kHz): > 100 dB
- D/A converter: 24-bit, 192 kHz
- Distortion and Noise (1 kHz): > 85 dB
- Dynamic Range (1 kHz): > 90 dB
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: > 100 dB
- Sound System: Dolby Digital

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Quick start guide, Remote Control, Warranty Leaflet, World Wide Warranty leaflet

Product dimensions

- Product dimensions (W x H x D): 18 x 18 x 5.7 cm
- Weight: 0.4 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 25 x 21 x 8 cm
- Gross weight: 0.8 kg
- Net weight: 0.6 kg
- Tare weight: 0.2 kg
- EAN: 48 95185 62095 4

Outer Carton

- Number of consumer packages: 6
- Outer carton (L x W x H): 49.2 x 23.1 x 27.1 cm
- Gross weight: 6 kg
- Net weight: 3.6 kg
- Tare weight: 2.4 kg
- GTIN: 1 48 95185 62095 1



Issue date 2017-04-04

Version: 1.0.6

12 NC: 8670 001 34861
EAN: 48 95185 62095 4

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com