

Philips Cineos  
SoundBar DVD home  
theatre

HTS8150



## Seduction by sound

with Ambisound

Indulge in a 5.1 surround sound experience from an integrated one-piece system, in any sort of room. Specially designed to match the Philips Aurea TV, this Ambisound-powered SoundBar also delivers superb sound and picture quality.

### Hear and see

- Ambisound for 5.1 surround sound from fewer speakers
- Excellent sound quality with soft dome tweeters and DoubleBASS
- FullSound™ to bring your MP3 music to life
- Faroudja DCDi for incredibly sharp high-quality video
- HDMI 1080p upscales to high definition for sharper pictures

### Connect

- EasyLink to control all HDMI CEC devices via a single remote
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- Dock your iPod for media playback with on-screen control

### Live

- Touch panel controls for easy playback and volume control
- Matches any flat TV with optimal fit for 42" TV or larger
- Matches the Aurea TV in an elegant and upmarket design
- SoundBar with integrated speakers, amplifiers and DVD player

# PHILIPS


# Highlights

## SoundBar



The SoundBar is a complete all-in-one home theatre solution that delivers superb 5.1 surround sound for an immersive movie experience. With integrated speakers, amplifiers and DVD player, the SoundBar is all you need below your television. It lets you keep your living room the way you want it, yet delivers an amazing multi-channel sound experience - for movie moments shared with friends and family.

## Dock your iPod

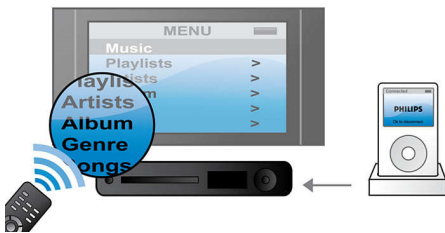

The docking station included with your home theatre system lets you play movies, music and photos from your iPod. What's more, you can control the iPod and browse through its contents on your TV screen - all with the home theatre system's remote. The dock brings portable entertainment into your home - with absolute convenience and ease of use.


## Matches the Aurea TV



A touch of class, blending into your living room, designed to match the dazzling Aurea


TV — this SoundBar is set to astound with its looks and performance. Indulge in an exceptional home entertainment experience with no compromise to your lifestyle.

## Matches any flat TV

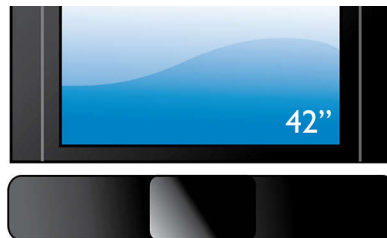


The SoundBar lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 107 cm (42") screen or larger, it will also sit under any other flat TV like a companion - matching your whole interior and lifestyle.

## Touch panel controls

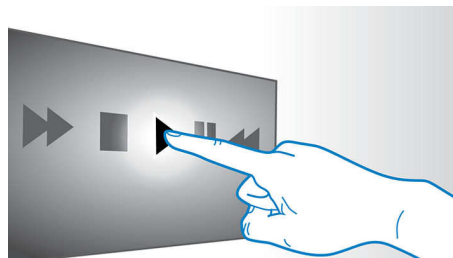

Touch panel controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

## Hi-Speed USB 2.0 Link

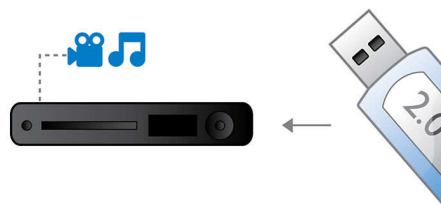

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the


12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Ambisound

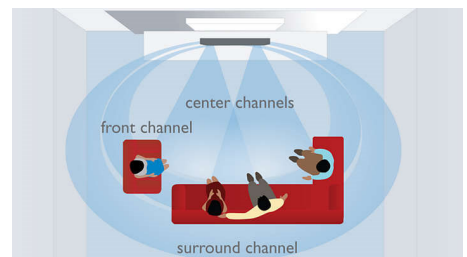

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.



# Specifications

## Sound

- Sound Enhancement: Smart Surround, DoubleBass, Treble and Bass Control, ClearVoice
- Sound System: Ambisound, Dolby Digital, DTS, Dolby Prologic II, Stereo
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

## Connectivity

- Front/Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, SCART1 (CVBS, RGB out), TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box)
- Subwoofer (Power Box): FM Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit), Optical digital input

## Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name

## Power

- Power supply: 220-240 V, 50 Hz
- Standby power consumption: <0.3 W

## Accessories

- Included accessories: Quick start guide, User Manual, Dock for iPod, Remote Control, Batteries for remote control, HDMI cable, Full SCART cable, MP3 Line-in cable, FM antenna, Interconnect cable,

Power cord, Wall mounting bracket, World Wide Warranty leaflet

## Dimensions

- Packaging Depth: 598 mm
- Set Width: 1047 mm
- Weight incl. Packaging: 32 kg
- Packaging Height: 388 mm
- Set Height: 174 mm
- Packaging Width: 1120 mm
- Set Depth: 154 mm
- Set weight: 8.9 kg
- Subwoofer Weight: 12.7 kg
- Subwoofer Depth: 322 mm
- Subwoofer Height: 425 mm
- Subwoofer Width: 322 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Faroudja DCDi

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom

## Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV 9
- Video disc playback system: PAL, NTSC



Issue date 2024-04-13

Version: 1.0.1

EAN: 87 12581 45998 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)