

Philips  
DVD home theatre system



HTS3565



## Powerful surround, high definition video

with powerful compact speakers

Powerful surround sound and high definition pictures delivered by this elegant system provide unbeatable home entertainment. Enjoy sharp pictures with 1080p HDMI upconversion, as well as playback from portable media players and USB sticks.

### Brings audio and video to life

- DoubleBASS for an extended, deep bass experience
- Clear Voice for more audible vocals in movies and music
- FullSound™ to bring a CD listening experience to MP3
- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke scoring for fun and exciting song contests at home

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### Easy to set up and use

- HDMI cable included
- EasyLink controls all EasyLink products with a single remote


### Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

**PHILIPS**  
sense and simplicity

# Highlights

## FullSound™

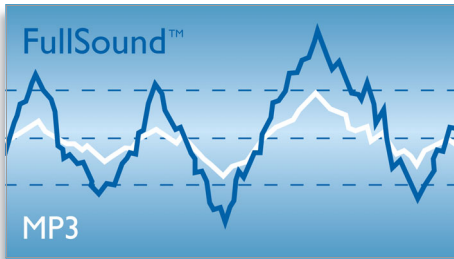

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

## DoubleBASS



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## HDMI cable included



HDMI cable included


## EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-

standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Hi-Speed USB 2.0 Link

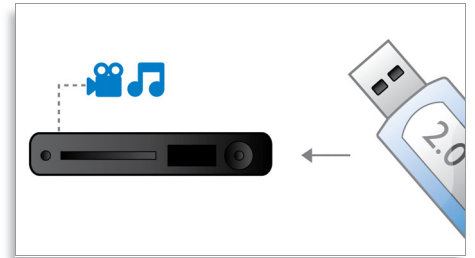

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan

## Sound

- Output power (RMS): 4 x 125 W, 2 x 250 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: >65 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD, CD-R/RW, DVD-R/-RW, DVD+R/+RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM

## Connectivity

- Front/Side connections: Hi-Speed USB, MP3 Line-in, Microphone input 3.5 mm jack
- Rear Connections: HDMI output, Component

Video output, S-Video out, Composite video (CVBS) output, AUX in, FM Antenna, Easy-Fit speaker connectors, Digital optical in

## Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

## Loudspeakers

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 6 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded, 3-way
- Centre speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Centre speaker impedance: 3 ohm
- Centre freq range: 150-20,000 Hz
- Subwoofer driver: 8" high-efficiency woofer
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

## Accessories

- Included Accessories: Remote Control, HDMI cable, 2 x AAA Batteries, CVBS video cable, FM antenna, Quick start guide, User Manual, World Wide Warranty leaflet

## Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 4.04 kg
- Surround Speaker dimensions (W x H x D): 103 x 203 x 71 mm
- Surround Speaker Weight: 0.54 kg
- Center speaker dimensions (W x H x D): 440 x 105 x 75 mm
- Centre Speaker Weight: 1.39 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 555 x 310 x 515 mm
- Weight incl. Packaging: 15.1 kg



Issue date 2009-12-07

Version: 5.1.3

12 NC: 8670 000 50005  
EAN: 87 12581 46710 4

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.