


Philips
DVD/SACD Home
Theatre System

HTS3500S

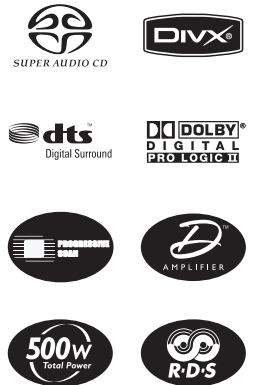

See, hear, experience everything

This stylish and compact full digital home entertainment system plays practically any disc in high quality Dolby, DTS or SACD surround sound. So relax and fully immerse yourself in movies and music in your own personal environment.

Great audio and video performance

- PAL & NTSC Progressive Scan gives razor-sharp images
- Dynamic Bass Boost for deep and dramatic bass
- Conical Dome Tweeters enhance SACD sound in high frequencies

Plays it all

- Movies: DVD, DVD+R/RW, (S)VCD, DivX, MPEG4
- Music: SACD, CD, MP3-CD, CD-R, CD-RW & Windows Media™ Audio
- Picture CD (JPEG) with music (MP3) playback

Quick and easy set-up

- Easy set-up to initialise your total home entertainment
- Easy-fit™ connectors with colour-coding for a simple set-up



PHILIPS
sense and simplicity

Specifications

Picture / Display

- **Aspect ratio:** 4:3, 16:9
- **D/A converter:** 12 bit, 108 MHz
- **Picture enhancement:** Progressive scan, 4x Video Upsampling

Sound

- **D/A converter:** 24 bit, 192 kHz
- **Frequency response:** 30-20000 Hz
- **Signal to noise ratio:** >62 dB
- **Sound system:** Dolby Prologic II, DTS, Dolby Digital, Stereo
- **Equaliser settings:** Action, Classic, Concert, Digital, Drama, Jazz, Rock, Sci-Fi
- **Output power (RMS):** 4x75W (front+surround), 2x100W (center+subwoofer)
- **Total sound power (RMS):** 500 W
- **Sound enhancement:** Class "D" digital amplifier, Dynamic bass enhancement

Video playback

- **Playback Media:** DVD-Video, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, Video CD/ SVCD, Picture CD, Super Audio CD, WMA
- **Compression formats:** MPEG1, MPEG2, MPEG4, DivX 3.11, DivX 4.x, DivX 5.x
- **Video disc playback system:** NTSC, PAL

Audio Playback

- **Playback Media:** CD, MP3-CD, WMA, SACD multichannel, SACD Stereo, CD-R, CD-RW
- **Compression format:** Dolby Digital, DTS, MP3, PCM, Windows Media™ Audio
- **MP3 bit rates:** 32-256 kbps and VBR

Still picture playback

- **Playback Media:** Picture CD
- **Picture compression format:** JPEG
- **Slide show:** with music (MP3)

Tuner / Reception / Transmission

- **Tuner bands:** FM stereo, MW
- Auto digital tuning
- Auto store
- **Number of preset channels:** 20
- **RDS:** Station name

Connectivity

- **Other connections:** SCART I (CVBS, S-video/RGB

out), S-Video out, AUX in, Digital coaxial in, Line out, FM antenna, MW antenna, Easy fit speaker connectors, Component video out progressive, Composite video (CVBS) out

Convenience

- **Remote control:** Multi functional

Power

- **Power supply:** 200-240 V, 50Hz
- **Standby power consumption:** < 0.5 W

Loudspeakers

- **Satellite speaker:** Magnetically shielded front
- **Satellite speaker freq range:** 120-20000 Hz Hz
- **Satellite speaker impedance:** 6 ohm
- **Satellite speaker drivers:** 1" conical dome tweeter, 3" mid range woofer
- **Centre speaker:** Magnetically shielded
- **Centre freq range:** 120-20000 Hz Hz
- **Centre speaker impedance:** 3 ohm
- **Centre speaker drivers:** 1" conical dome tweeter, 3" mid range woofer
- **Subwoofer freq range:** 30-120 Hz
- **Subwoofer impedance:** 3 ohm
- **Subwoofer driver:** 6.5" high efficiency woofer

Accessories

- **Included accessories:** Scart cable, AC power cord, FM/MW antenna, Remote control, Batteries for remote control, User manual, Quick user guide, Warranty certificate

Dimensions

- **Set dimensions (W x H x D):** 360 x 54 x 324 mm
- **Set weight:** 2.7 kg
- **Surround Speaker dimensions (W x H x D):** 94 x 175 x 65 mm
- **Surround speaker Weight:** 0.58 kg
- **Center speaker dimensions (W x H x D):** 225 x 94 x 75 mm
- **Centre speaker weight:** 0.78 kg
- **Subwoofer dimensions (W x H x D):** 360 x 340 x 130 mm
- **Subwoofer weight:** 3.92 kg
- **Packaging dimensions (W x H x D):** 570 x 310 x 440 mm
- **Weight incl. packaging:** 18 kg

Product highlights

PAL & NTSC Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending fields with the odd lines to the screen first, followed by the fields with the even lines, both fields are written at one time. A flicker free high resolution image is created giving you the best viewing experience.

Conical Dome Tweeters

Conical Dome Tweeters enhance SACD sound at the highest frequencies by capturing every nuance and inflection of sound by using an extremely light and stiff membrane created of LEXAR, which allows the tweeters to deliver a higher range of audio frequency. The special cone shape of the reflector dish ensures a wider sound distribution of the higher frequencies. This results in stunningly clear and crisp highs and an overall more balanced sound perception.

Multi-format Movies-DivX, MP4

Multi format playability allows you to play most disc formats for maximum compatibility and viewing pleasure.

Music:SACDWindows Media™ Audio

Multi format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and picture files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.



Issue date 2007-08-04

Version: 1.1.0

12 NC: 9073 100 12486
EAN: 87 10895 87071 9

© 2007 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com