




Philips  
docking speaker

with Lightning connector  
for iPod/iPhone  
10W, rechargeable battery

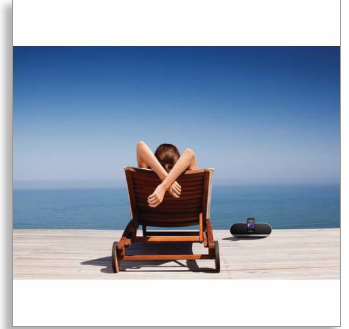

DS7580

## Designed to go places

Compatible with iPhone 5 and the latest iPods through the Lightning connector, the DS7580 docking speaker is ideal for travel because of its compact form factor but powerful sound. It also comes with a rechargeable battery and a carrying pouch.

### Sound that blows you away

- wOOx technology for rich yet precise bass without distortion
- DBB to preserve low tones for deep bass at any volume level
- Shielding technology to block mobile phone interference
- 10 W RMS total output power

### Advanced versatility

- Fast charging and play music via Lightning connector

### Made to go places

- Built-in rechargeable Li-ion battery for long music playback
- Carrying pouch included

### Truly portable and versatile

- Elegant, slim and compact design to fit into any briefcase
- Audio-in for easy portable music playback

# PHILIPS

Docking speaker  
with Lightning connector for iPod/iPhone, 10W, rechargeable battery

# Highlights

## Play and charge via Lightning



Enjoy your favourite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while it's playing, so you don't have to worry about the battery running out.

## wOOx technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

## Dynamic Bass Boost (DBB)



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

DS7580/10

# Specifications

## iPhone compatibility

- Compatible with: iPhone 5

## iPod compatibility

- Compatible with: iPod nano 7th generation, iPod touch 5th generation

## Sound

- Output power (RMS): 10 W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Volume Control: Volume Control up/down

## Loudspeakers

- Neodymium magnet system

## Connectivity

- Audio in (3.5 mm)

## Power

- Power supply: 100-240 VAC, 50/60 Hz
- Battery type: Li-ion (built-in)
- Operating time on battery: up to 8 hr

## Dimensions

- Product dimensions (WxDxH): 381 x 44 x 107 mm
- Packaging dimensions (WxDxH): 405 x 82 x 150 mm
- Product weight: 0.58 kg
- Weight incl. Packaging: 1.16 kg



Issue date 2014-07-22

Version: 4.0.5

12 NC: 8670 000 96316  
EAN: 08 71258 16626 60

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)