


Philips
wireless portable speaker

Bluetooth
Blue

BT150A

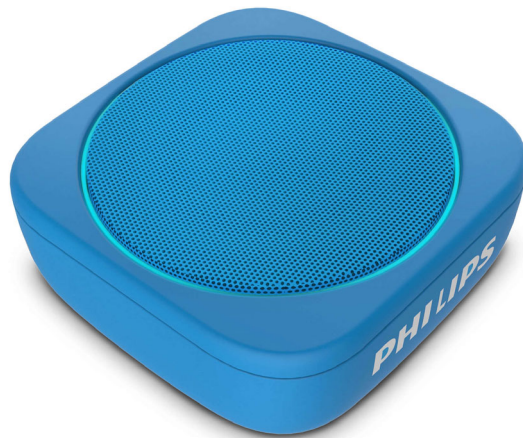

Pool party. Shower party. Your party.

Wherever. Whenever. This waterproof Bluetooth speaker packs chunky bass into a tiny package and gives you surprisingly big sound. You get eight hours of play time and audio-in. From the pool to the shower—make it your kind of party.

Bring the tunes. Anywhere.

- Buttons on speaker for play and volume/skip tracks
- Finely knitted detachable carry strap
- Hang it from your bag or on your bike. 9.5 x 9.5 x 3.8 cm
- LED lights around the speaker grille. Blue/random colours

Music or calls

- Audio-in. Connect to almost any source
- Built-in mic. Take your calls via the speaker
- Up to 10 m wireless range

Turn it up. In the pool. In the shower.

- 1.5" full-range speaker. A passive radiator boosts bass
- 8 hours of play time. USB charging. Micro USB cable included
- Anti-clipping function. Play it loud without distortion
- Waterproof to 1 m for up to 30 minutes. IPX7 rated

PHILIPS

Specifications

Sound

- Output power (RMS): 4 W
- Sound System: Mono

Design and finishing

- Colour: Blue

Connectivity

- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

Convenience

- Display type: LED display (multi-colour)
- Water resistance: IPX7

Compatibility

- other Bluetooth-enabled device
- work with: up to iOS 10.2, Bluetooth 4.2 or below

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: up to 10 hour(s)

Accessories

- Included accessories: Quick install guide, World Wide Warranty leaflet, carrying strap
- Cable: USB charging cable

Dimensions

- Product dimensions (WxDxH): 9.5 x 9.5 x 3.95 cm
- Weight incl. Packaging: 0.3 kg
- Packaging dimensions (WxDxH): 11.5 x 5 x 15 cm
- Product weight: 0.21 kg

Highlights

Waterproof and ready to go

Poolside, lakeside, in the shower. This waterproof IPX7-rated speaker floats and can withstand being submerged in depths of up to 1 m for up to 30 minutes.

8 hrs of play time. USB charging.

The battery gives you 8 hours of play time from a full charge. Charging takes around 3 hours and is easy via the included micro USB cable.

Control your music

Control the music from buttons on the side of the speaker. Press to play and double-press the volume up/down buttons to skip tracks. The speaker grille has LED lights that glow a steady blue or flash random colours.

Crisp sound. Punchy bass.

The 1.5" full-range speaker delivers crisp, clear sound even when you play it loud. A passive radiator boosts the bass giving you that much more punch on the low-end tones.

Built-in mic

Power on the speaker and it's ready to pair with your Bluetooth device. The wireless range is 10 m and the built-in mic lets you take calls out loud. When a call comes in, the music pauses automatically.

Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.

Anti-clipping function

Anti-Clipping lets you play music louder and keeps its high quality, even when the battery is low. It accepts a range of input signals, from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

Detachable carry strap

Finely knitted detachable carry strap

Hang it from your bag

Hang it from your bag or on your bike. 9.5 x 9.5 x 3.8 cm

LED lights

LED lights around the speaker grille. Blue/random colours

Up to 10 m wireless range

Bluetooth is a short-range wireless communication technology that is both robust and energy efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily enjoy your favourite music, sound from video or game on this speaker wirelessly.

