

Philips Immersive Sound
Home theater

DVD

HTS3532BL



Powerful Surround Sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

Designed to enhance your living space

- Modern design to complement your home environment

Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback

PHILIPS


Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Dolby Digital

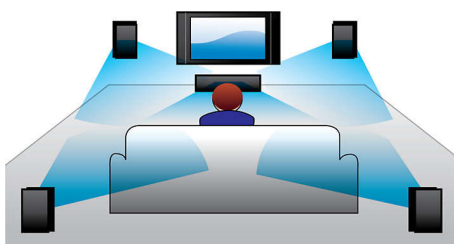

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to

save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Modern design

Modern design to complement your home environment



Specifications

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 50 W
- Satellite speaker output power: 4 x 50 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 2.5" woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital optical in, FM Antenna Socket, Easy-Fit Speaker Jacks, HDMI 1.4 output (ARC)

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, Audio Return Channel, One touch play, One touch standby, Remote Control-Passthrough

Power

- Power consumption: 55 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, FM

antenna, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 360 x 58 x 323 mm
- Weight incl. Packaging: 9 kg
- Main Unit Weight: 2.3 kg
- Packaging (W x H x D): 520 x 345 x 377 mm
- Center Speaker (W x H x D): 159 x 84.5 x 80 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Front Speaker Weight: 0.35 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 159 x 80 mm
- Rear Speaker Weight: 0.35 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: mp3, wma
- Video: avi, divx, mpeg, mpg
- Picture: JPEG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 4.2.5

EAN: 87 12581 64302 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com