



Philips Immersive Sound  
Home theater

DVD

Immersive Sound



HTS3532BL

## Powerful Surround Sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

### Great listening experience

- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience
- 300W RMS power delivers great sound for movies and music

### Designed to enhance your living space

- Modern design to complement your home environment

### Simply enjoy all your entertainment

- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback
- HDMI for high definition movies and picture quality
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote

# PHILIPS


# Highlights

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Dolby Digital

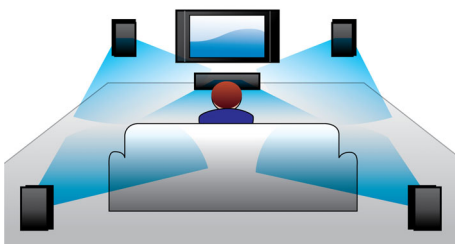

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

## Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX

media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

## Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital optical in, FM Antenna Socket, Easy-Fit Speaker Jacks, HDMI 1.4 output (ARC)

## Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, Audio Return Channel, One touch play, One touch standby, Remote Control-Passthrough

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 323 mm
- Main Unit Weight: 2.3 kg
- Center Speaker (W x H x D): 159 x 84.5 x 80 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm

- Front Speaker Weight: 0.35 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 159 x 80 mm
- Rear Speaker Weight: 0.35 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 520 x 345 x 377 mm
- Weight incl. Packaging: 9 kg

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 2.5" woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 55 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Center speaker output power: 50 W
- Satellite speaker output power: 4 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

## Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM



Issue date 2014-03-17

Version: 4.2.5

12 NC: 8670 000 89627  
EAN: 87 12581 64302 7

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)