




Philips  
Bluetooth® Hi-Fi adapter

Bluetooth® music receiver

For smartphone, tablet  
NFC  
Bluetooth® aptX and AAC

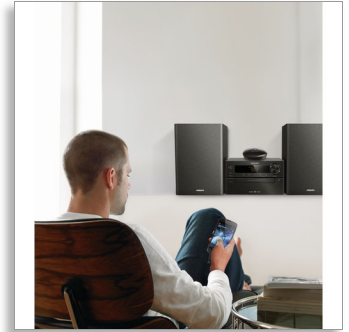

AEA2500

## Play music wirelessly from smartphone to Hi-Fi

### Bluetooth-enabled

Philips Bluetooth® Hi-Fi Adapter turns your Hi-Fi or PC speaker system into a wireless sound system. Simply connect the adapter, and you're ready to play music from your smartphone, tablet and other Bluetooth-enabled devices to your Hi-Fi.

#### Wireless music streaming via Bluetooth® technology

- Works with any smartphone or tablet with Bluetooth®
- Connects wirelessly via Bluetooth® technology
- Stream your local music library via Bluetooth® technology
- Stream music apps from your smartphone or tablet to Hi-Fi
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- High fidelity Bluetooth® (aptX® and AAC) music streaming

#### Turns your Hi-Fi into a wireless sound system

- Connects to almost any Hi-Fi or PC speaker system
- Uses RCA or 3.5mm jack to connect adapter
- Enjoy better sound than from your smartphone

#### Simplicity in use

- Plug-and-play for easy use
- Smooth and compact design

# PHILIPS

## Bluetooth® Hi-Fi adapter

Bluetooth® music receiver For smartphone, tablet, NFC, Bluetooth® aptX and AAC


# Highlights

### NFC technology



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth® pairing, and begin streaming music.

### High fidelity Bluetooth®

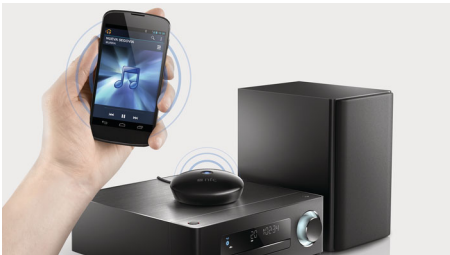

With advanced technology, sound streamed via Bluetooth® is brought to the next level. Standard Bluetooth® audio uses SBC codec that is built for basic audio transmission, leaving listeners sometimes disappointed and dissatisfied. The Hi-Fi adapter, however, is armed with high fidelity (aptX® and AAC) Bluetooth® wireless technology – giving you rich, powerful and crystal clear sound. Compatible with both latest Android™ and Apple iOS smartphones, tablets and other devices, Philips now delivers the audio quality you have come to expect. Wireless music never sounded this good.

### RCA or 3.5mm jack

Standard analogue RCA or 3.5mm jack (cable included).

### Enjoy better sound

You love music, and have a huge library on your smartphone and tablet. But the built-in speakers just don't sound right. With the Bluetooth® Hi-Fi adapter you can listen to all your favorite music in better sound.

### Plug-and-play

The Bluetooth® Hi-Fi adapter connects readily to your favorite Hi-Fi. Just plug it in the RCA or 3.5mm jacks, and you are ready to play music from your smartphone or tablet on your Hi-Fi.

### Bluetooth® connectivity



The Bluetooth® Hi-Fi adapter uses Bluetooth® to connect to your smartphone or tablet.

### Compact design



The Bluetooth® Hi-Fi adapter features a compact and streamlined design, looking perfect on your favorite Hi-Fi.

### Links to smartphone or tablet



Bluetooth® Hi-Fi Adapter works with Bluetooth®-enabled phones and tablets. Just turn on Bluetooth®, connect to the Hi-Fi adapter and play music from your smartphone/tablet on your Hi-Fi.

### Stream music library



You store your music on smartphone and tablet. With Bluetooth® Hi-Fi Adapter, you can stream all your music from your music library to your Hi-Fi system.

### Stream online music apps



Every music lover has his favorite music service or online radio apps on his mobile devices. Now you can play them directly on your Hi-Fi system.

### Works with most Hi-Fi systems



You can connect the Bluetooth® Hi-Fi adapter to almost any Hi-Fi or PC speaker system using standard analogue RCA or 3.5mm jack.



# Specifications

## Connectivity

- NFC technology
- Bluetooth version: 3.0
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth: support aptX & AAC streaming
- Bluetooth range: Up to 10m
- Audio out (3.5mm)
- RCA Aux out

## Accessories

- AC Adapter

- Cables: RCA to 3.5mm cables
- Quick start guide

## Dimensions

- Product dimensions (W x H x D):  
74 x 22 x 74 mm
- Product weight: 0.04 kg

## Power

- Power supply: 100-240 V ~, 50/60 Hz



Issue date 2020-07-08

Version: 4.0.3

12 NC: 8670 001 03015  
EAN: 87 12581 68781 6

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)