



Philips  
Cordless phone

- D400
- White



D4002W



## Comfortable and convenient

With a curved shape for in call comfort, and the natural voice reproduction of HQ-Sound, relaxed conversations are effortless. Useful features like a large, full graphic display and backlit keypad, make staying in touch even easier.

### As convenient as it should be

- Keypad backlight for fast access even in dark room
- Large, 4.6cm (1.8") full graphical display
- Contoured handset design for in call comfort
- Textured back cover for non-slip grip
- Up to 16 hours of talk time on a single charge
- Silence mode for more privacy
- Caller ID – so you always know who is calling

### Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- Freestanding handset with a speaker for easy handsfree calls
- MySound profiles to match your sound preference

### Eco-conscious product

- Low radiation (ECO and ECO+ modes) and power consumption

**PHILIPS**

# Highlights

## 4.6cm (1.8") graphical display

Large, 4.6cm (1.8") full graphical display

## Caller ID



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

## Contoured handset design



Designed for maximum in call comfort the handset fits naturally against the curve of your face.

## Eco-conscious model with ECO+



Philips phones are energy efficient and designed to be respectful to the environment. The power consumed by them in stand-by mode is less than 0.75 W. When ECO mode is


activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

## Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## HQ-Sound

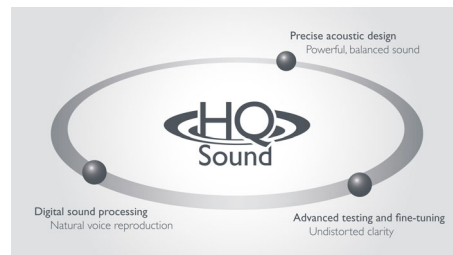


Philips cordless phones with HQ-Sound: build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything – high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## Keypad backlight



The soft white backlight makes keys easy to read in low light conditions and at night.

## MySound profiles

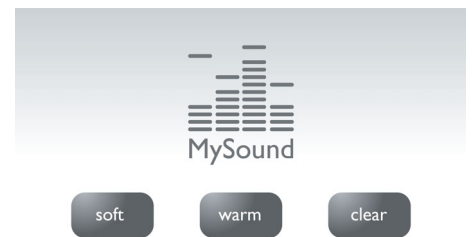

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear – to make voices sound crisper and clearer; Soft – for friendly, softer tones; Warm – to make voices sound welcoming and warm.

## Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

# Specifications

## Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: FSTN - dot matrix
- Backlight: Yes
- Backlight color: Soft Amber

## Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 20 last numbers
- Call log entries: 50 entries
- Phonebook store in the base

## Convenience

- Menu structure in the handset: List Menu
- Speakerphone - talk handsfree
- Personalization: Silence mode
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Alarm Clock
- Battery charge indication
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting, Caller ID, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto Registration
- Auto hang up
- Multi base capability: 1
- Multi handset capability: Up to 4
- Number of keys: 20
- Backlit keypad: Soft Amber
- Base Station keys: Paging key
- Up to 250 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; in door <50m

- Keypad lock
- Non-slip grip: Pinstripe texture
- Up to 16 hrs talk time

## Sound

- HQ-Sound
- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic

## Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: < 0.7 W

## Security

- Transmission encryption : Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- Eco+
- Full ECO Mode (NEMO)

## Packaging dimensions

- Packaging dimensions (W x H x D):  
18.5 x 13.6 x 10.4 cm
- EAN: 87 12581 66568 5
- Gross weight: 0.94 kg
- Nett weight: 0.81 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.13 kg



Issue date 2013-05-11

Version: 1.0.1

12 NC: 8670 000 97079  
EAN: 87 12581 66568 5

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)