

# PHILIPS

Energy-Saver  
Ceramic Heater

5000 Series

PTC ceramic heating technology

AI-powered for energy saving

5 built-in safety features

Connected to Air+ app

CX5120/11



## Powerful heating, optimal energy efficiency

Saves up to 50% energy vs regular fan heaters

Stay cosy and save energy with our Smart Heater. Featuring 2000 W ceramic heating, wide-angle oscillation, app control, multiple safety features and AI technology, it adapts to your room temperature and usage patterns for energy savings.

### Superior performance

- Heats up in 2 seconds with powerful ceramic heating
- Saves up to 50% energy vs regular fan heaters(1)
- Track and control your heater with the Philips Air+ app

### Seamless operation

- 5 x advanced safety protection for peace of mind
- Customise your experience with multiple settings

### Effortless control

- Maximise heat coverage in your room with the 60° oscillation
- Thoroughly tested for durability and quality
- Sleek and compact design
- Easy to carry with built-in handles
- Sleep comfortably, without feeling cold


# Highlights

## High performance




Experience rapid heating with our PTC ceramic technology and adjustable power of up to 2000 W. It heats up in just 2 seconds and effectively spreads warm air to quickly envelop your space. Perfectly suited for rooms up to 20 m<sup>2</sup> in size.

## Low energy consumption

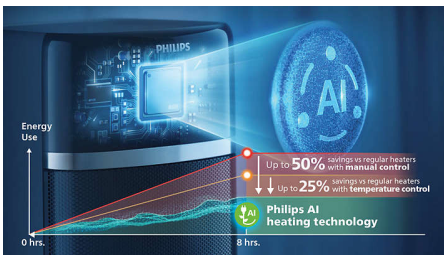

The world's first electric heater that uses AI to save energy while heating the room. This heater not only adapts to your room's temperature but also analyses your usage habits to optimise energy consumption. Simply use the Air+ app to activate Auto Plus mode and enjoy personalised comfort with enhanced energy efficiency.

## The Philips Air+ app

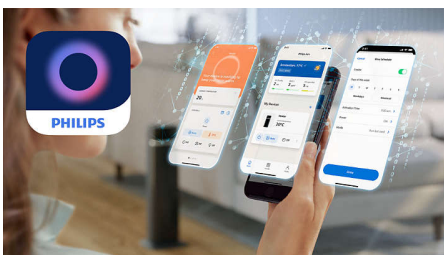

The Air+ app tracks room temperature and gives you feedback of the outdoor air quality in real time whilst keeping you in control, at home or away, with a digital remote and a smart scheduler.

## 5 x safety features



Enjoy peace of mind with our advanced 5 x safety protection system, ensuring your utmost safety: 1) tip-over protection, automatically powering off the device if it tilts over 30°, 2) overheat protection, ensuring automatic shutdown when the temperature reaches 85°C, 3) VDE certified safety plug to prevent short circuits, 4) V0 flame retardant materials, and 5) safety auto-off after 24 hours of inactivity.

## 4 settings



Set your target temperature (1-37°C) and customise your warmth with 2 heater levels. For optimal efficiency, engage the auto mode, which utilises an energy-saving algorithm to efficiently heat your room. On warmer days, enjoy a gentle breeze with the fan mode, adding an extra layer of comfort to your environment.

## Oscillation



Wide-angle oscillation ensures that warm air is circulated throughout your room. No more cold spots, just a comfortable and cool experience.

## Thoroughly tested for durability and quality



When choosing Philips, you choose a trusted brand with more than 80 years of experience and innovation in air care. Our heater goes through more than 122 mandatory tests to ensure that it provides you with reliable, long-lasting comfort, today and tomorrow.

## Sleek and compact design



The seamless design makes it perfect for use in bedrooms, offices, kitchens, and other areas. Designed to fit in every corner of the room, our heater is only 58 cm high and 21 cm wide.

## Portability



Bring the heat to anywhere you want with the built-in handle. Designed with practicality in mind, the slim and lightweight product could be easily moved wherever you need.

# Specifications

## Performance

Recommended room size: 20 m<sup>2</sup>

Heater power settings: 2

Auto mode

Fan mode

Eco mode: Auto Plus (in the app)

## Usability

Cord length: 1.7 m

Artificial Intelligence (AI): Self-adaptive technology

Timer: Yes (1-12 h)

Sound level: 40.5 dB

Adjustable thermostat: 1-37°C

Oscillation: Yes (60°)

## Energy efficiency

Max heater power consumption: 2000 W

Stand-by power consumption: 2 W

Min heater power consumption: 1200 W

Fan power consumption: 8 W

## Connectivity

App, connects via Wi-Fi: Air+

Smartphone compatibility: iPhone and Android devices

## Weight and dimensions

Product weight: 2.4 kg

Product dimensions (L\*W\*H): 21.2 x 19.6 x 58 cm

Weight (Incl. packaging): 3.3 kg

Packaging dimensions (L\*W\*H): 23.2 x 21.3 x 62 cm

## Maintenance

Colour(s): Dark grey

## Safety features

Overheat protection

Tip-over protection

Auto Off

Flame retardant

Certified plug: CE, UKCA, IEC

