

Philips  
Soundbar speaker

2.1 CH wireless subwoofer  
Bluetooth® aptX, AAC and NFC  
1 HDMI in and HDMI out ARC  
Only 29.8-mm slimness

HTL6140B



## Powerful sound for any TV

with wireless subwoofer

At just 2.98 cm (1.2") thick, the Philips HTL6140 is a super flat Soundbar that can be mounted anywhere. Boasting 320W of power and a 220W 20.3-cm (8") subwoofer it sounds much bigger than it looks and it streams music over Bluetooth with aptX and AAC.

### Designed to enhance your living space

- Wireless subwoofer for clutter-free placement
- 2.98-cm slimness

### Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- Connect to one HDMI in for great picture and sound quality
- HDMI ARC to access all the sound from your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Powerful 320-W sound output
- Premium soft dome tweeters for Crystal Clear Sound
- Dolby Digital and DTS for great surround sound
- 8" woofer for thumping bass

# PHILIPS

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, Only 29.8-mm slimness


# Highlights

### Powerful 320-W sound output




6 neodymium woofers and 2 premium soft dome tweeters, which produce crystal clear high tones, ensure premium quality sound. Their total output is 320 W, which is matched with a powerful 8" 220-W subwoofer. The HTL6140 is not just extremely thin; it sounds extremely good.

### Premium soft dome tweeters

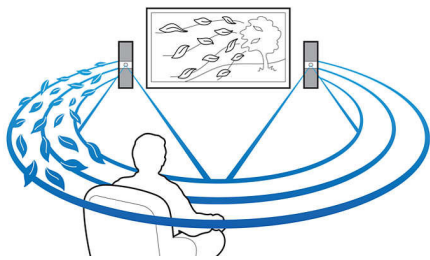


With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source—whether it's an action film, a musical or a live performance—faithfully, precisely and without any distortion. Philips home theatres with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

### Bluetooth® (aptX® and AAC)

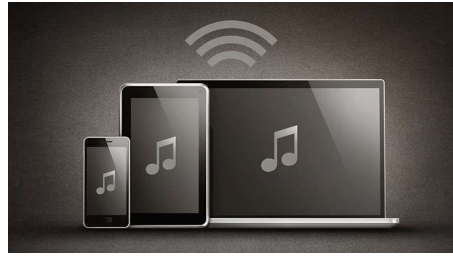

Bluetooth® (aptX® and AAC) for wireless music streaming

### NFC technology

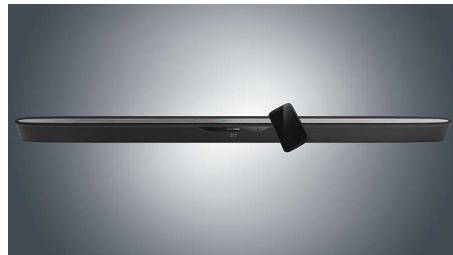

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

### Wireless subwoofer

Wireless subwoofer for clutter-free placement

### HDMI ARC

HDMI ARC to access all the sound from your TV

### 2.98-cm slimness


2.98-cm slimness

### 8" woofer for thumping bass

8" woofer for thumping bass

HTL6140B/12

### Dolby Digital and DTS

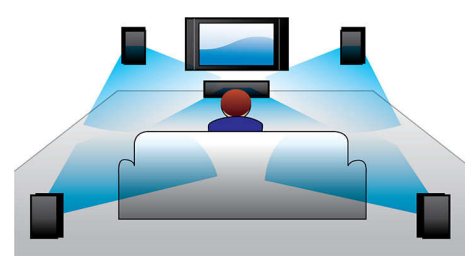


Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

### One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output into the connection on your non-3D AV receiver.

### Virtual Surround Sound

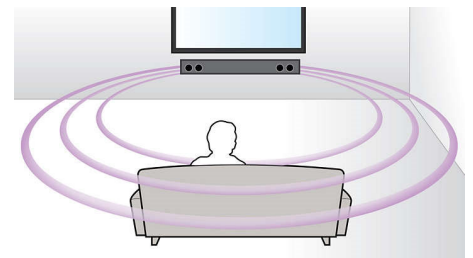

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, Only 29.8-mm slimness

HTL6140B/12

# Specifications

### Sound

- Sound Enhancement: Treble and Bass Control, Audio sync, Auto Volume Leveller, Virtual Surround Sound
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220 W
- Speaker output power: 100 W
- Total Power RMS @ 10% THD: 320 W

### Loudspeakers

- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Soundbar: 2 X 1" soft dome tweeters, 6 X 2" neodymium woofers

### Connectivity

- Integrated Connections: Bluetooth APT-X, NFC
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio-in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC

### Outer Carton

- EAN: 87 12581 70693 7
- Length: 110 cm
- Number of consumer packages: 1
- Width: 35.5 cm
- Gross weight: 12.7 kg
- Height: 31.4 cm
- Net weight: 7.8 kg
- Tare weight: 4.9 kg

### Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC),

### Content Type

### Power

- Power supply: 110-240V, 50 Hz
- Standby power consumption: <0.5 W

### Packaging dimensions

- Height: 31.4 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 110 cm
- Depth: 35.5 cm
- Number of products included: 1
- EAN: 87 12581 70693 7
- Gross weight: 12.7 kg
- Net weight: 7.8 kg
- Tare weight: 4.9 kg

### Product dimensions

- Height: 7.16 cm
- Width: 104.6 cm
- Depth: 3 cm
- Weight: 1.5 kg

### Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, Wall mount bracket

### Design

- Wall mountable

### Dimensions

- Main Unit (W x H x D): 1046 X 71.6 X 30 mm
- Subwoofer (W x H x D): 208 x 301 x 403 mm



Issue date 2024-05-02

Version: 8.1.7

EAN: 87 12581 70693 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)