

Philips
VCD Mini Hi-Fi System



FWV135

Video CD and MP3-CD Playback

Savor the magic of movies and music on the FWV135 with VCD and MP3-CD playback or to be a Karaoke Star. Enjoy music powerfully enhanced by Dynamic Bass Boost and 600W PMPO.

Enrich your sound experience

- 2x10W RMS / 600W PMPO
- Bass Reflex speakers deliver a powerful, deeper bass

Longer listening, greater enjoyment

- playback VCD2.0 format disc and be downwards compatible
- 10 hours of MP3-CD music
- Digital tuning with presets
- Stereo cassette deck

Personalized sound settings

- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings

Be a singing sensation

- Karaoke for endless karaoke entertainment at home

PHILIPS
sense and simplicity

Highlights

2x10W RMS / 600W PMPO
2x10W RMS / 600W PMPO

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

VCD 2.0 playback

playback VCD2.0 format disc and be downwards compatible

10 hours of MP3-CD music




MP3 stands for "MPEG 1 Audio layer-3".MP3 is a revolutionary compression technology by

which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

Digital tuning with presets

Digital tuning with presets

Stereo cassette deck

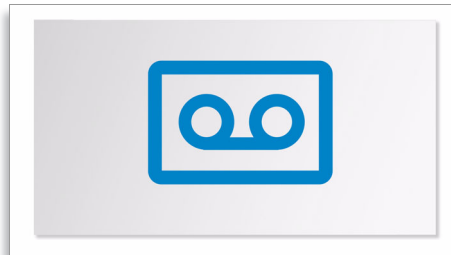

Stereo cassette deck

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Karaoke



The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allows you to choose the optimal key for your personal vocal range.



Specifications

Sound

- Output Power: 2x10W RMS / 600W PMPO
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control

Loudspeakers

- Main Speaker: 4" woofer, Bass Reflex Speaker System

Video Playback

- Playback Media: Video CD
- Loader Type: Top
- Number of Discs: 1
- Disc Playback Modes: PBC, A-B Repeat, Fast Forward, Fast Backward, Slow Backward, Slow Forward, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: Repeat/Shuffle/Program
- Programmable Tracks: 20
- Cassette Deck Technology: Mechanical
- Number of decks: 1
- Cassette Playback Modes: Automatic Stop

Audio Recording

- Recording Media: Tape
- Tape Recording Enhancement: Automatic Recording Level, CD Synchro Start Recording

Tuner/Reception/Transmission

- Auto digital tuning

- Tuner Bands: FM Stereo, MW, FM
- Number of Preset Channels: 30

Connectivity

- Aux in: Line in
- Headphone: 3.5 mm
- Microphone: Microphone socket
- Other connections: Composite video (CVBS) out, MW Antenna, FM Antenna

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer
- Clock: On main display
- Display Type: LCD
- Karaoke: MIC volume, Echo control, Key control

Accessories

- Included Accessories: Video Cable, FM/MW Antenna
- Remote control: 45-key
- User Manual: English, Simplified Chinese
- Guarantee booklet: Global version

Dimensions

- Set dimensions (W x H x D): 267 x 298 x 254 mm
- Main speaker dimensions (W x H x D): 193 x 286 x 246 mm
- Packaging dimensions (W x H x D): 739 x 373 x 313 mm
- Weight incl. Packaging: 11.45 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2009-07-17

Version: 1.0.5

12 NC: 9073 100 13191
EAN: 87 10895 94392 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com