



Philips  
Portable speaker

Purple



SBA1610PUR

## Mobile speaker

Filling your world with rich, dynamic sound, Philips SBA1610 speakers come with a handy mobile stand that makes them incredibly easy to use.

### Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- Neodymium speaker drivers deliver pure balanced sound
- 2 W RMS total output power

### Designed for grab and go

- Music on the go
- Up to 8 hours' music playback

### Simplicity

- Battery powered for portability
- Compatible with any media

**PHILIPS**  
sense and simplicity

Portable speaker  
Purple

# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
16.3 x 4.9 x 5 cm
- Weight: 0.169 kg

## Compatible with

- Smartphones
- iPod
- iPhone
- MP3 player

## Design and finishing

- Colour: Purple

## Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W


## Power

- Battery type: AAA
- Operating time on battery: 12 hr
- Number of batteries: 3

SBA1610PUR/00

# Highlights

## Class D Digital Amplifier

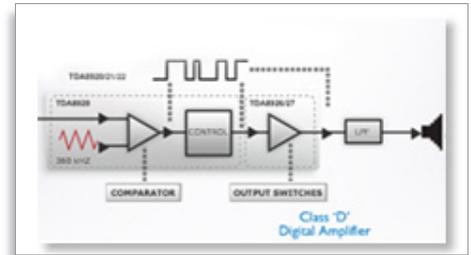

The Class 'D' Digital Amplifier takes an analogue signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, the Class 'D' Digital Amplifier has over 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2013-03-03

Version: 2.0.7

12 NC: 8670 000 95095  
EAN: 69 23410 71789 1

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)