




Philips  
Bluetooth speaker with  
clock radio

### Bluetooth® and NFC

USB port for charging  
Dual alarm  
FM

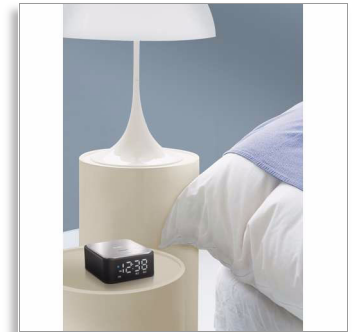

SB170

## Clock radio for your smartphone

Start your day with the Philips clock radio speaker. It delivers great sound via Bluetooth and fast charging for smartphones/tablets via the USB port. For added convenience, One-touch with NFC enabled smartphones for easy Bluetooth pairing

### Enrich your sound experience

- Wireless music streaming via Bluetooth
- FM digital tuning
- Audio-in for portable music playback
- 6W RMS total output power

### Easy to use

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- USB port to charge any mobile device
- Clock display for clear time viewing


### Start the day your way

- Gentle wake for a pleasant wake up experience
- Dual alarm to wake you and your partner at different times
- Sleep timer for easy falling asleep to your favorite music

# PHILIPS


# Highlights

## NFC technology

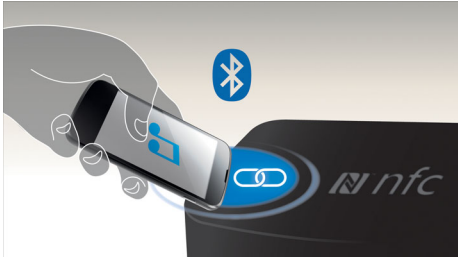

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## Wireless music streaming

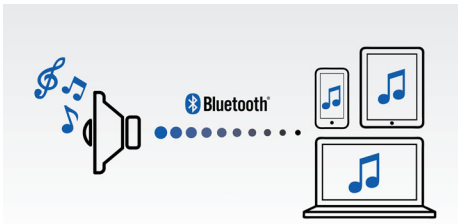


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Dual alarm

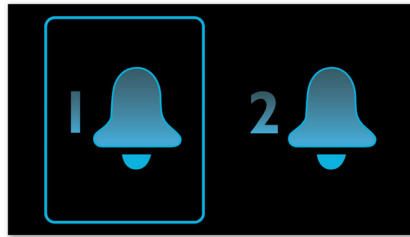

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## Sleep Timer



Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.

# Specifications

## Compatibility

- Android tablets & smartphones
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

## Sound

- Output power (RMS): 6W
- Sound System: Stereo
- Volume Control: Volume Control up/down

## Connectivity

- NFC: Tap-to-pair Bluetooth; works with Android

- 4.0 or above, and Windows phone 8 or above
- Bluetooth version: 2.1
- Bluetooth profiles: A2DP, AVRCP, SPP
- Bluetooth range: line of sight, 10M or 30FT
- Audio in (3.5mm)

## Convenience

- Clock/Version: Digital, 12/24 hr
- USB port: to charge mobile device (5V, 1A)

## Dimensions

- Product dimensions (WxDxH): 137 x 141 x 62 mm
- Packaging dimensions (WxDxH): 219 x 79 x 158 mm
- Weight incl. Packaging: 0.88 kg

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2014-08-13

Version: 4.0.5

12 NC: 8670 001 08472  
EAN: 00 60958 52383 43

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)