Register your product and get support at

www.philips.com/welcome

AS851



User manual



Contents

1	Important Risk of swallowing batteries	2 2
2	Your Docking Speaker for Android™ Introduction What's in the box Overview of the main unit Overview of remote control	3 3 3 4 5
3	Get started Prepare the remote control	6
	Connect power Turn on	6 6
	Switch to standby mode	6
4	Play and charge Compatible with Android™	7 7
	Play audio through manual Bluetooth connection	7
	Play audio through auto Bluetooth connection with Philips DockStudio Install DockStudio app onto	8
	Android-powered device Activate Bluetooth with	8
	DockStudio app Play audio from Android-powered	11
	device Play audio with Philips Songbird	13 13
	Install Songbird on Android- powered device	13
	Install Songbird on PC Sync with PC through Philips	15
	Songbird Dock and charge Android-powered	15
	phone	15
	Dock Android-powered device	15
	Use dock extension	16
	Charge Android-powered phone	16

5	Other features	
	Use more features with DockStudio	17
	Listen to Internet radio	17
	Set sleep timer	17
	Set alarm timer	18
	Charge your device through the USB	
	socket	19
	Play audio from an external device	20
6	Product information	21
	Specifications	21
7	Troubleshooting	22
	About Bluetooth device	22
8	Notice	23
	RSS	23
	Disposal of your old product	23
	Bluetooth Statement	24

1 Important

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Keep the battery away from heat, sunshine or fire. Never discard battery in fire.
- Replace the battery with the same or equivalent type only.
- The battery contains chemical substances, so it should be disposed of properly.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

2 Your Docking Speaker for Android[™]

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this docking speaker, you can:


- enjoy audio from your Bluetooth-enabled portable device or an external device;
- charge your portable device; and
- experience various features brought by Philips Philips DockStudio and Philips Songbird app.

What's in the box


Check and identify the contents of your package:

- Main unit
- Power adapter
- Remote control
- Dock extension
- Quick start guide
- Safety sheet

Overview of the main unit

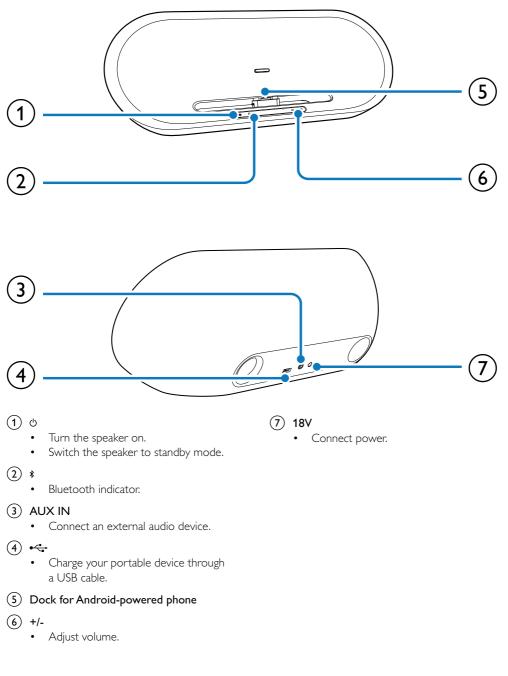

Overview of remote control

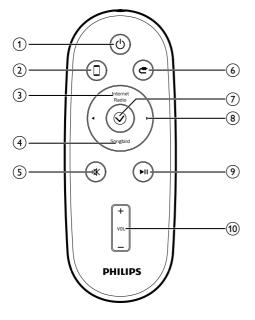

(1) ଓ

- Turn the speaker on.
- Switch the speaker to standby mode.

2 🛛

• Select Dock source.

(3) Internet Radio

- Listen to Internet radio through Philips
 DockStudio app.
- (4) Songbird
 - Activate Songbird player.
- (5) ⊮
 - Mute or resume sound.
- 6 🖻
 - Select MP3 link source.
- (7) ⊘
 - Access the clock screen in **DockStudio** app.
- ⑧ ◀/▶
 - Select the previous or next track.

(9) ▶11

- Start or pause play.
- (10) VOL +/-
 - Adjust volume.

3 Get started

Always follow the instructions in this chapter in sequence.

Prepare the remote control

Caution

- Risk of explosion! Keep batteries away from heat, sunshine, or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Perchlorate Material-special handling may apply. See
 www.dtsc.ca.gov/hazardouswaste/perchlorate.
- The battery contains chemical substances, so it should be disposed of properly.

For first-time use:

Remove the protective tab to activate the battery.

To replace the battery:

- 1 Pull out the battery tray and remove the old battery.
- 2 Place a new lithium CR2025 battery into the battery tray with correct polarity (+/-) as indicated.
- **3** Insert the battery tray back into the slot.




Connect power

Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the unit.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

Connect the AC power adaptor to

- the power socket at the back of the speaker.
- the wall outlet.

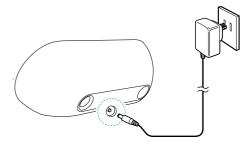

Turn on

Press එ.

→ The Bluetooth indicator ***** begins to blink.

Switch to standby mode

Press $\ensuremath{\mathfrak{O}}$ again to switch the docking speaker to standby mode.

→ The Bluetooth indicator ***** turns off.

4 Play and charge

With this docking speaker, you can enjoy audio in two ways:

- through manual Bluetooth connection;
- through automatic Bluetooth connection with **Philips DockStudio** app.

Compatible with Android[™]

To make full use of your docking speaker, your Android-powered device should satisfy the following requirements:

- With Android operation system (Version 2.1 or above);
- With Bluetooth software (Version 2.1 or above); and
- With a micro USB connector.

For other devices with micro USB connector and Bluetooth function, you can still use the docking speaker to do the following:

- Charge your device through the USB connector or USB socket;
- Enjoy audio through Bluetooth.


• For more details, go to www.philips.com/flexidock.

Play audio through manual Bluetooth connection

The docking speaker uses Bluetooth wireless technology to stream music from your portable device to the system.



- Before you connect a Bluetooth device to this docking speaker, familiarize yourself with the Bluetooth capabilities of the device.
- Keep this docking speaker away from other electronic devices that may cause interference.
- 1 On your docking speaker, press & to activate Bluetooth.
 - → The Bluetooth indicator ***** begins to blink.
- 2 Turn on Bluetooth function of your portable device.
 - Different devices may have different way to activate Bluetooth.

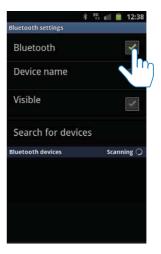


- **3** Scan Bluetooth devices that can pair with your portable device.
- 4 When [PHILIPS AS851] is displayed on your device, select it to start connection.
 - ➡ If connection is successful, you will hear double beep confirmation, and find a different Bluetooth icon on the top of the screen.

[🔆] Тір

* 1. dil	12:38
Bluetooth settings	
Bluetooth	 Image: A start of the start of
Device name Galaxy S II	
Visible Make device visibl	
Search for de	*
Bluetooth devices	
PHILIPS AS 851 Connected to media audio	0
Philips PhotoFrame Pair with this device	
Walter Pair with this device	a

5 Play audio with the media player of your portable device.

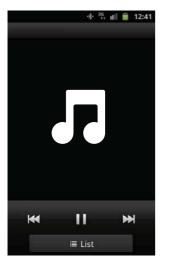

→ The audio comes out through the docking speaker.



- The effective operation range between the docking speaker and the paired device is approximately 10 meters (30 feet).
- Any obstacle between the speaker and the device can reduce the operational range.

Play audio through auto Bluetooth connection with Philips DockStudio

Philips DockStudio app brings a suite of new features to your docking speaker, including automatic Bluetooth connection, Songbird music player, Internet radio and a multi-function alarm clock. To enjoy more features, you are recommended to download and install the free app.

Install DockStudio app onto Androidpowered device

You have two ways to install **Philips DockStudio** on your Android-powered device.

Install DockStudio app through QR code

- Note

- Make sure that your Android-powered device is connected to the Internet.
- Make sure that your device has a barcode scanner such as "QR Droid". If not, download one from the Android market.
- 1 Use the barcode scanner to scan the QR code on the package or Quick Start Guide.



2 Follow the on-screen instructions to install Philips DockStudio app.




The Philips DockStudio app brings a suite of cool, new features to your Philips DockStudio docking speaker, including automatic Bluetooth connection, Songbird music player, worldwide Internet radio, sound settings

3 When installation is complete, tap **[Done]** (done).



→ The **DockStudio** icon appears on your portable device.

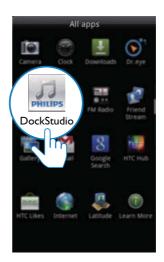

Install DockStudio app through Android Market

You can also search **Philips DockStudio** from Android Market directly, and then install the app.



- Make sure that your Android-powered device is connected to the Internet.
- Make sure that Android Market is available on your Android-powered device.
- 1 Tap the "Android Market" icon on your device.



2 Tap the search icon on the screen.



- **3** In the search bar, type in "Philips DockStudio" to search the app.
- 4 From the search result list, find and tap Philips DockStudio to start downloading.
- 5 Follow the on-screen instructions to install the **DockStudio** app.



The Philips DockStudio app brings a suite of cool, new features to your Philips DockStudio docking speaker, including automatic Bluetooth connection, Songbird music player, worldwide Internet radio, sound settings



Activate Bluetooth with DockStudio app

Philips DockStudio app helps to connect your Android-powered device and docking speaker through Bluetooth automatically.



 Make sure that your Android-powered device is connected to the Internet.

First-time launch

- 1 On your docking speaker, press め to activate Bluetooth.
 - →

 s begins to blink.
- 2 On the home screen of your device, tap the **DockStudio** icon to launch the app.



- → A prompt message asking you to download **Songbird** appears.
- **3** Tap [Cancel] (cancel).



➡ The device starts to scan Philips devices that can be paired automatically.



- 4 When [PHILIPS AS851] is displayed on your device, select it to start connection.
 - → It may take a few seconds to complete the connection.



→ After Bluetooth connection, a different Bluetooth icon can be found on the top of the screen.



Next-time launch

Next time you launch the **DockStudio** app, connect to the docking speaker through Bluetooth as below.

- 1 Activate the Bluetooth function of your docking speaker.
- 2 Launch Philips DockStudio to access its menu.



3 Tap **[Speaker Connection]** (Speaker Connection) to activate automatic Bluetooth connection.



→ It may take a few seconds to complete the connection.

Play audio from Android-powered device



1

 Make sure that the docking speaker is successfully connected to the Android-powered device through Bluetooth.

Press 🛛 to select the Dock source.

2 Play audio on the Android-powered device.


- To pause or resume play, press ► II.
- To skip to the previous or next track, press ◀ / ►.
- To adjust volume, press +/-.
- To mute or resume sound, press ��.

Play audio with Philips Songbird

Philips Songbird is a simple, easy-to-use PC program and Android app. It lets you discover, play and sync your media from PC to your Android-powered devices seamlessly.


Install Songbird on Android-powered device

1 Tap the **DockStudio** icon on your Androidpowered device.

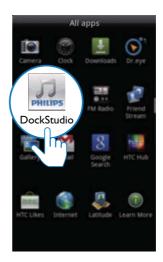

→ The **DockStudio** menu is displayed.




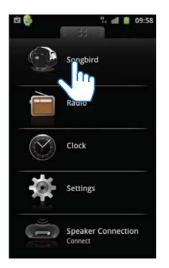

- → You are requested to download **Songbird**.
- **3** Follow the on-screen instructions to download the app.



4 After installation, tap [Open] (Open) to access Songbird menu.

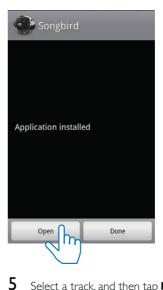

Select a track, and then tap \blacktriangleright to play music.





• To play audio through the Songbird player, press **Songbird**.

Install Songbird on PC

- 1 Go to www.philips.com/songbird.
- 2 Search Songbird.

songbird

3 Download the latest **Songbird** application.

Q


4 Follow on-screen instructions to install Philips Songbird on your PC.

Sync with PC through Philips Songbird



• Make sure that you have turned on the USB storage.

- 1 On your PC, launch Philips Songbird.
- 2 Connect your Android-powered device to PC with a USB cable. Wait until the device is recognized by the Songbird.
 - → On Philips Songbird, the device is displayed when it is recognized by the PC.

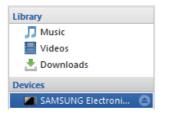


→ If it is the first time you connect the device to Philips Songbird, a pop-up screen appears. Select auto sync as prompted.

Name:	SAMSUNG Electronics Co., Ltd. Samsung Android U
🛃 Aut	omatically sync music to this device
	lips Songbird will automatically sync media to this device each time you connect r whenever there's a change to your library.
Ign	ore this device
On	ly select if you do not want Philips Songbird to manage this device
	08

→ The device synchronizes with Philips Songbird automatically.

If you didn't select auto sync, you can sync with **Songbird** manually.

1 Select the device under **Devices**.



2 Select Manual or Auto.

Manual

Audio Syncing:

Sync

3 Click Sync.

→ If you have selected auto sync, auto sync starts automatically when you connect the device to the PC.


Auto


Dock and charge Androidpowered phone

Dock Android-powered device


To charge your Android-powered phone, you need to dock it in the docking speaker first.

 Check the orientation of the micro USB connector on your Android-powered phone. If your USB connector has a cover, flip it outwards. 2 If necessary, rotate the USB connector on the docking speaker, and then place your Android-powered phone onto the dock.

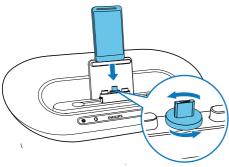


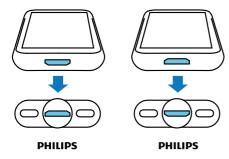

3 Adjust the bumpers on both sides of the connector to stabilize the phone.

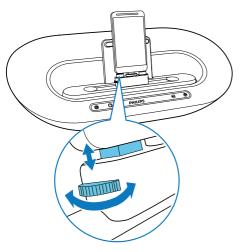

4 Slide the connector to place your phone in the middle of the docking speaker.

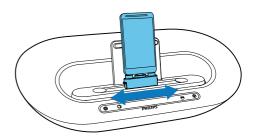


Тір

 If the micro USB connector is located at the top, and your are using Android system of version 2.3 or above, screen auto-rotation is available.

Use dock extension

If the USB connector on your phone is close to the edge, the supplied dock extension can balance the docked phone, as illustrated.

- 1 Adjust the slide knobs to make both bumpers at the lowest position.
- 2 Place the dock extension onto the dock.
- **3** Dock your phone.



Charge Android-powered phone

When the docking speaker is connected to power, the docked phone starts charging automatically.



• This function is also available for non Android-powered device that has a micro USB connector.

5 Other features

Use more features with DockStudio

With **Philips DockStudio**, you can also listen to Internet radio, set alarm timer and sleep timer.



• Make sure that your portable device is connected to the Internet.

Listen to Internet radio

- 1 Connect your Android-powered device and the docking system through Bluetooth.
- 2 Open Philips DockStudio to go to the main menu.
- **3** Tap **[Radio]** (Radio) on the screen.



4 Search a radio station in the search bar.



- 5 Select a radio station from the search result list.
 - \mapsto The radio station begins to broadcast.

🔆 Тір

• You can also access Internet radio by pressing **Internet Radio**.

Set sleep timer

- Launch Philips DockStudio.
- 2 Press \otimes to display the clock screen.



3 Tap the icon ***** to access the sleep timer menu.



4 Select a time period for the sleep timer, and then tap [Start] (Start).





Set alarm timer

With **Philips DockStudio**, you can set multiple alarms and know the latest weather. It even alerts you when weather conditions are suitable for your favorite outdoors activity.






2 Tap the icon ***** to access clock setting menu.



3 Tap **[Alarm settings]** (Alarm settings).







- 5 Set the alarm, and tap [Save] (Save) on the top right of the screen.
 - → The new alarm is saved and displayed on the screen.





Note

 From the [Lifestyle] (Lifestyle) tab, you can select your preferred sport and weather (excellent, good, or fair). The alarm will not ring if the weather is not good enough.

Charge your device through the USB socket

Connect a USB cable (not supplied) to:

- the USB socket on your device.
- → Your device begins charging.

Note

 It is not guaranteed that all USB cables will work with this speaker.

Play audio from an external device

You can listen to audio from an external device through this speaker.

- 1 Press 🖝 to select MP3 link source.
- 2 Connect an MP3 link cable (not supplied) to:
 - the AUX IN socket.
 - the headphone socket of an external device.
- **3** Play audio on the external device (see the device's user manual).

6 Product information

• Product information is subject to change without prior notice.

Specifications

AC Power	Model: OH- 1065A1803500U2(Philips); OH-1065A1803500U(UL) (Philips). Input: 100-240 V~, 50/60 Hz, 1.5 A; Output: 18 V == 3.5 A
Operation	28 W
Power	
Consumption	
Eco Standby	<1 W
Power	
Consumption	
Dimensions -	
Main Unit (W x	429 X 169 X 108 mm
H x D)	
Weight - Main	2.1 kg
Unit	
Charging:	
- Only through	2A
Micro USB	
connector	2A
- Only through the •↔ socket	274
-Through	1A for each
Micro USB	in the each
connector and	
the • socket	

⁻ Note

7 Troubleshooting

Warning

• Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power adaptor of the device is connected properly.
- Make sure that there is power at the AC outlet.

No sound or poor sound

- Adjust the volume of the docking system.
- Adjust the volume of your phone.

No response from the unit

• Disconnect and reconnect the AC power plug, then turn on the unit again.

About Bluetooth device

Music playback is unavailable on the system even after successful Bluetooth connection.

• The device cannot be used with the system to play music.

The audio quality is poor after connection with a Bluetooth-enabled device.

• The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.

Cannot connect with the system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device.
 Disconnect that device or all other connected devices and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

The set complies with the FCC-Rules, Part 15. Operation is subject to the following two conditions:

1.This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

RSS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on

separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Bluetooth Statement

😵 Bluetooth

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Philips is under license.



The type plate is located on the bottom of the apparatus.



Specifications are subject to change without notice \circledast 2012 Koninklijke Philips Electronics N.V. All rights reserved.

AS851_37_CCR_V2.0

