

Philips  
DVD player



DVP3850G



## Enjoy it all - from DVD or USB

with wireless game pad and 30 games

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Play all your movies and music

- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- DivX Ultra Certified for enhanced DivX video playback

### Game-ready for extra fun

- Games CD provided for instant fun
- Wireless game pad for hassle-free fun

### Bring audio and video to life

- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks


# PHILIPS

# Highlights

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## USB Media Link

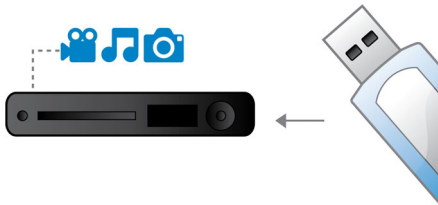

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Games CD

This player comes pre-packed with a bonus games CD for extra fun. Just put a game CD in the disk drive and start having added enjoyment on the go.

## Wireless game pad


Unlike other game consoles that use cables, this player comes with an infrared, wireless game console to free you up and let you enjoy hours of hassle-free fun.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Progressive Scan

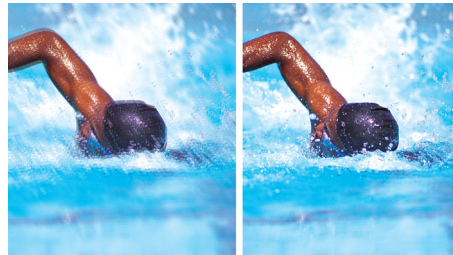

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably

sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## 12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## One-touch MP3 creation

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 100 dB
- Distortion and Noise (1kHz): > 85 dB
- Crosstalk (1kHz): > 100 dB
- Dynamic Range (1kHz): > 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom,

Slideshow, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: DivX, JPEG Still pictures, MP3
- Multimedia connections: USB memory class device

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Scart
- Front / Side connections: USB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Czech, English, Greek, Hungarian, Polish, Russian, Turkish

## Power

- Power consumption: < 10 W
- Power supply: 50Hz, 230V
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: Remote Control, World Wide Warranty leaflet, User Manual, AAA Battery (x1)

## Dimensions

- Packaging dimensions (W x H x D): 400 x 80 x 284 mm
- Set dimensions (W x H x D): 360 x 42 x 209 mm
- Set weight: 1.3 kg
- Weight incl. Packaging: 2.4 kg



Issue date 2017-06-04

Version: 2.1.4

12 NC: 8670 000 76081  
EAN: 87 12581 60287 1

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)