

Philips Wireless Bluetooth[®] headphones

8.6mm drivers/closed-back

SHB5850WT



Rich bass anywhere

Wireless with great sound and perfect fit

The compact SHB5850 Bluetooth[®] earphones delivers powerful drivers with up to 7 hours of wireless music enjoyment.

Enjoy quality sound

- Efficient 8.6mm drivers deliver clear and powerful sound
- · Oval sound tube inserts seals out ambient noise

Brings convenience to your lifestyle

- Support Bluetooth 4.1 + HSP/HFP/A2DP/AVRCP
- Tangle-free flat cables for convenience on the go
- · Wireless control and enjoyment of music and calls

Designed for long wearing comfort

- \bullet Choose from 3 pairs of ear caps for the perfect fit for you
- Ergonomic oval sound tube for a truly comfortable fit



Highlights

Bluetooth technology



Pair your headphones with any Bluetooth device for crystal clear music enjoyment – wirelessly.

Choice of 3 pairs of ear caps




Ear caps come in a choice of 3 sizes – small, medium and large – for a personalized and perfect fit.

Efficient 8.6mm drivers



Compact and efficient 8.6mm speaker drivers deliver precise sound with powerful bass, for enhanced listening enjoyment on the go.

Ergonomic oval sound tube

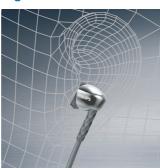

The oval shape of the sound tube came about based on extensive research on the human ear. Designed to fit any ear comfortably, the ergonomic shape ensures optimal fit and comfort for total music enjoyment.

Oval sound tube inserts



Oval sound tube inserts seals out ambient noise, while its semi-closed structure deliver enhanced bass performance.

Tangle-free flat cable

Anti-slip flat cable ensures that your cord always stays tangle free.

Wireless music and calls



Pair your smart device with your headphones using Bluetooth and enjoy the freedom of crystal clear music and phone calls – without the hassle of cables. Change tracks and answer calls with the easy to use remote control.

Specifications

Accessories

- Quick start guide: Included
- · USB cable: Included for charging

Design

• Color: White

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Maximum range: Up to 10 m
- Bluetooth version: 4.1

Convenience

- Call Management: Answer/End Call, Reject Call, Last number redial, Call on Hold, Switch between call and music
- Volume control

Power

- Battery Type: LI-Polymer
- Music playtime: 7* hr
- Standby time: 150 hr*
- Talk time: 7* hr

Sound

- Frequency range: 10 -21 000Hz
- Impedance: 16 ohm
- Magnet type: Neodymium
- Maximum power input: 20 mW
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB

- Acoustic system: Closed
- Diaphragm: PET
- Type: Dynamic
- Sound Enhancement: Echo Control, Noise Reduction
- · Voice coil: Copper

Outer Carton

- Gross weight: 0.26 kg
- GTIN: 1 69 25970 71208 5
- Outer carton (L x W x H): 11 x 10.7 x 19 cm
- Number of consumer packagings: 3
- Tare weight: 0.185 kg
- Nett weight: 0.075 kg

Packaging dimensions

- Packaging dimensions (W \times H \times D): 9.5 \times 17.3 \times 3 cm
- Gross weight: 0.065 kg
- Nett weight: 0.025 kg
- Number of products included: 1
- Tare weight: 0.04 kg
- · Packaging type: Carton
- Type of shelf placement: Both
- EAN: 69 25970 71208 8

Product dimensions

- Cable length: 0 cm
- Product dimensions (W \times H \times D):
- 1.61 x 2.31 x 1.6 cm
- Weight: 0.012 kg



Issue date 2017-12-19

© 2017 Koninklijke Philips N.V. All Rights reserved.

Version: 1.0.4

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 001 42322 EAN: 69 25970 71208 8

www.philips.com

* Actual results may vary