



Philips
Portable DVD Player

23 cm/9" LCD
5-hr play time
USB



PD9030



Longer movie enjoyment on the go

with USB for videos, photos and music

Enjoy your movies anytime, anywhere! The PD9030 portable DVD player features a 9"/23 cm TFT LCD screen for a great viewing experience. You can indulge in up to 5 hours of DVD/DivX[®]/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 22.9 cm (9") TFT colour widescreen LCD display
- Built-in stereo speakers

Extra touches for your convenience

- Up to 5-hour playback with a built-in battery*
- USB connection for video, photo and music playback
- Smart Car Mount for ease of use
- AC adapter, car adapter and AV cable included
- Full Resume on Power Loss

PHILIPS


Highlights

5-hour built-in battery*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

DVD, DVD+/-RW, (S)VCD, CD

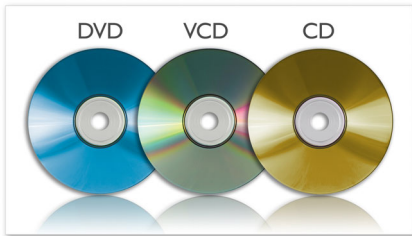

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise,

DVD+/-RW handles both common rewritable disc types.

22.9 cm/9" TFT colour widescreen



The high resolution colour LCD display brings images to life, showing off your treasured photos, favourite movies and music with the same 'real life' rich detail and vibrant colours as high quality prints.

DivX Certified

With DivX[®] support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified[®] Philips device.

Smart Car Mount



To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

USB connection



Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favourite moments with family and friends.



Specifications

Product dimensions

- Product dimensions (W x H x D):
17.8 x 24 x 3.95 cm
- Weight: 1.1 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
27.2 x 28.5 x 7 cm
- Net weight: 1.392 kg
- Gross weight: 1.652 kg
- Tare weight: 0.26 kg
- EAN: 87 12581 59573 9
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying

Outer Carton

- Outer carton (L x W x H): 28.2 x 23.3 x 30 cm
- Net weight: 4.176 kg
- Gross weight: 5.306 kg
- Tare weight: 1.13 kg
- EAN: 87 12581 59574 6
- Number of consumer packages: 3

Picture/Display

- Diagonal screen size: 9 inch / 23 cm
- Resolution: 640 (w) x 220 (H) x 3 (RGB)
- Display screen type: LCD TFT

Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop

- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9 V, 1 A
- Headphone jack: 3.5 mm Stereo Headphone x 1
- AV output: Composite (CVBS) x 1
- USB

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adapter: DC-IN 9 V, 1 A, 110-240 v, 50/60 Hz
- Car kit: cigarette outlet adapter, 12vDC
- Remote control: AY5521 slim remote
- Cables: 1 x AV Cables
- User Manual: English
- Smart car mount

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs*

Dimensions

- Master carton dimensions: 225 x 295 x 280 mm
- Master carton quantity: 3
- Master carton weight: 5.25 kg
- Packaging dimensions (W x H x D):
272 x 285 x 70 mm
- Product dimensions (W x H x D):
239 x 39 x 178 mm
- Product weight: 1.1 kg
- Packaging type: D-box



Issue date 2016-04-29

Version: 1.0.6

12 NC: 8670 000 74768
EAN: 87 12581 59573 9

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.