



Philips
Wireless stereo speaker

Bluetooth®

Built-in microphone for calls
4 x AA battery
5W



BT3000B

Stream tunes wirelessly in seconds

Easy wireless Bluetooth® music streaming in a sleek, modern case. Bass Reflex speakers deliver deep and powerful bass while a built-in microphone is ideal for hands-free calling. Battery operation allows it to go wherever you want.

Impressive sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- 5W RMS total output power

Simplicity in use

- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free phone calls
- Audio-in for easy portable music playback

Advanced versatility

- Battery or AC power option for music enjoyment anywhere
- Up to 8 hours music playback

PHILIPS

Wireless stereo speaker
Bluetooth® Built-in microphone for calls, 4 x AA battery, 5W

Specifications

Compatibility

- iPad: iPad 1, iPad 2, iPad mini, iPad with Retina display, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 5W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 2.75"

Power

- Operating time on battery: 8 hr
- Battery type: AA
- Number of batteries: 4
- Power supply: 100-240VAC, 50/60Hz

Accessories

- AC/DC adaptor
- Quick start guide
- Warranty certificate
- World Wide Warranty leaflet

Product dimensions

- Product dimensions (W x H x D): 28 x 12.1 x 9.3 cm
- Weight: 1.25 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 36.9 x 16.8 x 14.1 cm
- Gross weight: 1.7 kg
- Nett weight: 1.385 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.315 kg
- Type of shelf placement: Laying
- EAN: 87 12581 72085 8

Outer Carton

- Outer carton (L x W x H): 38.2 x 15.5 x 35.5 cm
- Gross weight: 3.8 kg
- Nett weight: 2.77 kg
- Tare weight: 1.03 kg
- Number of consumer packagings: 2
- GTIN: 1 87 12581 72085 5



Issue date 2015-12-01

Version: 3.0.7

12 NC: 8670 001 14708
EAN: 87 12581 72085 8

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

BT3000B/12


Highlights

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Wireless music streaming

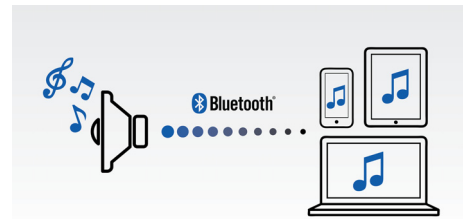

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.