

Philips
Classic micro sound
system

with 30-pin connector
for iPod/iPhone
CD, MP3-CD, USB, DAB+, FM
15 W

DCB188



Obsessed with sound

Sound system to relax with great music

Connect to power - and rich sound - when you dock and charge your iPod/iPhone on this stylishly compact Philips Micro sound system with Dynamic Bass Boost. Enjoy tuning in to favourite music or thousands of cool stations on DAB radio.

Enjoy digital quality DAB radio

- DAB for a clear and crackle-free radio experience
- DAB and FM compatible for a complete radio experience

Enjoy your music from multiple sources

- Play and charge your iPod/iPhone simultaneously
- Play MP3/WMA-CD, CD and CD-RW
- MP3 Link for portable music playback

Enrich your sound experience

- 15 W RMS total output power
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimised music style settings

Easy to use

- Dock any iPod/iPhone, even in its case
- Single remote control for the system and iPod

PHILIPS


Highlights

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

DAB

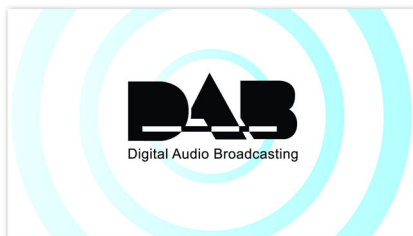

DAB (Digital Audio Broadcasting) digital radio is a new way of broadcasting radio, in addition to FM analogue transmission, via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB digital stations there are no frequencies to

remember, and sets are tuned by station name, so there is no retuning on the move.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on - just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Specifications

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/programme, Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Loader Type: Top
- Cradle playback mode: Fast forward and reverse, Next and Previous track, Play and Pause, Charging iPhone, Charging iPod

Sound

- Output Power: 15 W RMS total power
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control
- Sound System: Stereo

Loudspeakers

- Main Speaker: 3" woofer, Bass Reflex Speaker System

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20
- DAB: Band III, Info display, Menu, Smart Scan
- RDS: Programme Type, Radio Text, Station Name
- Tuner Enhancements: Auto Store

Connectivity

- Other connections: FM fixed pigtail antenna
- Audio Connections: 3.5 mm stereo line in -MP3 link

Convenience

- Alarms: Sleep timer, Radio Alarm, CD Alarm
- Clock: On main display
- Display Type: LCD
- Backlight colour: Blue
- Backlight

Accessories

- Included accessories: World Wide Warranty leaflet
- User Manual: English
- Quick start guide: English

Dimensions

- Set dimensions (W x H x D): 148 x 233 x 232 mm
- Main speaker dimensions (W x H x D): 132 x 233 x 159 mm
- Packaging dimensions (W x H x D): 326 x 270 x 326 mm
- Weight incl. Packaging: 5.1 kg

Power

- Power supply: 220-240 V, 50 Hz

iPod compatibility

- Compatible with: iPod, iPod mini, iPod nano, iPod with colour display, iPod 1G, iPod 5th Generation, iPod 6th Generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod touch, iPod touch 2nd Gen 8/16/32 GB

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4



Issue date 2014-07-18

Version: 1.0.4

12 NC: 8670 000 71867
EAN: 87 12581 58194 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com