



Philips
2.1 DVD Home theatre

HDMI ARC and USB
300 W



HTD3200

Pure surround sound

from compact speakers

Enjoy your movies, music and TV experience in realistic virtual surround sound with exposed speaker drivers and DVD video upscaling to 1080p via HDMI for near-HD images with the Philips DVD player HTD3200.

Great listening experience

- 300 W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- Virtual Surround Sound for a realistic movie experience
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS


Highlights

300 W RMS power



300 W RMS power delivers great sound for movies and music

Dolby Digital

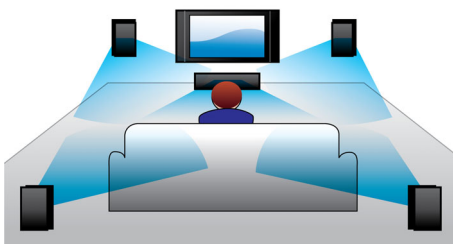


Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Virtual Surround Sound

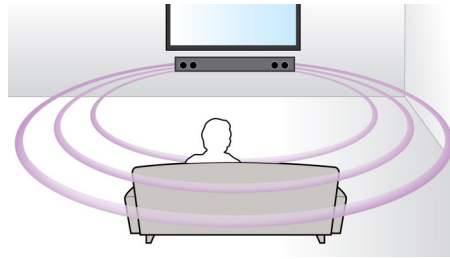

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution—ensuring more details and more true-to-life pictures.

Modern design

Modern design to complement your home environment

Plays it all



Play virtually any disc and any media devices you want - whether they are DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Specifications

Sound

- Sound System: Dolby Digital 5.1
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode
- Cube speaker output power: 2 x 75 W
- Subwoofer output power: 150 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 2 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 8 ohm

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p), Progressive scan, Video upscaling

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, DivX, mpeg, mpg

Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Fixed FM Antenna

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40

Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User manual on CD-ROM, World Wide Warranty leaflet

Power

- Power consumption: 55 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Cube speaker (W x H x D): 84.5 x 89 x 89 mm
- Cube Speaker Weight: 0.28 kg
- Cube Speaker Cable: 3 m
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Subwoofer cable length: 2 m
- Subwoofer Weight: 3.20 kg
- Packaging (W x H x D): 520 x 310 x 377 mm
- Weight incl. Packaging: 9 kg



Issue date 2016-03-09

Version: 7.2.6

12 NC: 8670 000 91114
EAN: 08 71258 16483 81

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com