Sound takes shape



You'll be impression the unexpected big sound from this small yet powerful sound system.

A new dimension to your audio experience


- Unique and innovative, 'soft' design
- Small footprint to blend into any lifestyle
- · Sophisticated aluminium body

Unexpected power

- Built-in speakers featuring XSL Acoustics for dynamic sound
- Dynamic Bass Boost delivers deeper, more dramatic bass

Easy to use

- Touch Screen for easy navigation
- Digital tuning with presets
- Motorized CD loader for convenience access
- · Remote control

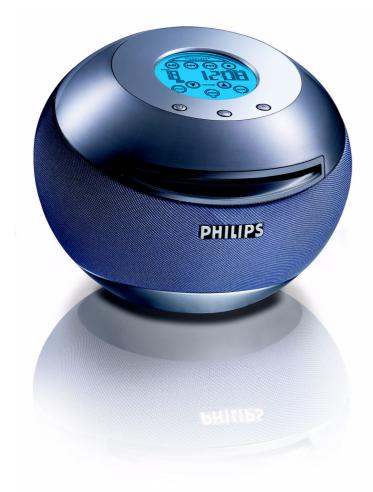





PSS010/05

Technical specifications

Sound

- Front speakers ways: 2
- Loudspeaker enhancement: Detachable cloth grilles
- · Loudspeaker types: Bass reflex speaker system
- Magnet type: Neodymium
- Output power (RMS): 2X2W+4W
- Sound enhancement: Advanced sound system, Dynamic Bass Boost
- · Sound system: Stereo
- Volume Control: digital
- · Woofer: I inch

Audio Playback

- Playback Media: CD, CD-R, CD-RW
- Disc playback modes: Fast forward / backward, Next / previous track search, Repeat play, Shuffle play
- Loader type: Motorised
- Programmable tracks: 20

Tuner / Reception / Transmission

- Antenna: FM antenna
- Antenna location: External
- · Auto digital tuning
- Tuner bands: FM

Connectivity

- DC in: 10V
- Headphone: 3.5 mm

Convenience

- Backlight
- Backlight colour: Blue
- Clock/Version: Digital
- Display digits: 7
- Display enhancements: Brightness control, Function indication, Touch screen control
- Display type: LCD

Accessories

- AC/DC adaptor
- Included accessories: User manual, Warranty certificate
- Remote control: 17 Key

Dimensions

- Packaging dimensions (W x H x D): 413 x 278 x 313 mm
- Product dimensions (W x H x D): 213 x 178 x 213 mm
- Weight: 3.4 kg
- Weight incl. packaging: 4.4 kg

Power

Adaptor type: I0V I200mA

Product highlights

XSL Acoustics

Enjoy dynamic sound and powerful bass performance from your ShoqBox with XSL Acoustics. Impressive sound is produced by combining bright, brisk treble and mid range sound with elastic, powerful bass. Innovative use of high-tech materials like titanium cone and neodymium magnet deliver sound output that's nearly double the power of a traditional speaker driver of the same size. Precise tuning between the speaker driver, the small acoustic architecture and the circuitry ensures superbly dynamic sound and optimises bass performance from the smallest sound enclosure.

Touch screen

Touch Screen Control allows you to control your device by simply pressing on-screen buttons rather than physical buttons on the device. Simply power up the device and the touch screen user interface will show up on the LCD display with all the control options for the device. Touch Screen Control combines LCD display technology with pressure sensors and a powerful digital micro processor. When you press on a specific area of the screen with your finger, the relevant signal is sent to the processor and the command is immediately executed.

Digital tuning with presets

Motorized CD loader

Dynamic Bass Boost

Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high — at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Remote control

Small footprint

Unique and innovative design

Sophisticated aluminium body



Date of issue 2005-12-16

Version: 3.0

12 NC: 9073 101 01251 EAN: 87 10895 81326 6 Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

© 2005 Koninklijke Philips Electronics N.V.

All Rights reserved.

www.philips.com