

Philips
DVD player with USB

DivX Ultra

DVP5268K



Enjoy DVD and USB video

With DivX® Ultra

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Brings audio and video to life

- 192 kHz/24-bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimised image quality
- 5.1 channel audio output for surround sound

Easy to use

- Create MP3s directly from CDs

Enjoy enhanced karaoke

- Karaoke scoring for fun and exciting song contests at home

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays media from USB flash drives

PHILIPS
sense and simplicity


Highlights

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Plays it all

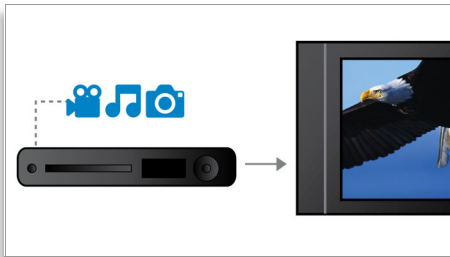

Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

192 kHz/24-bit audio DAC

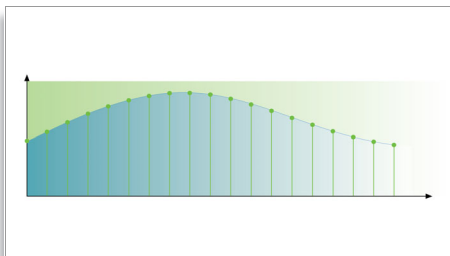

192 kHz sampling enables you to have an accurate representation of the original sound


curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Karaoke scoring




Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

Progressive Scan

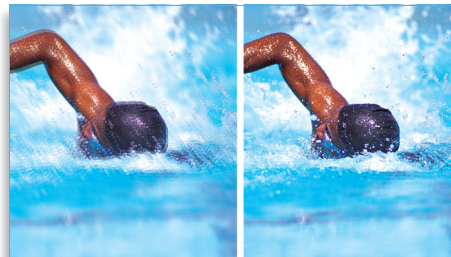


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

5.1 channel audio output

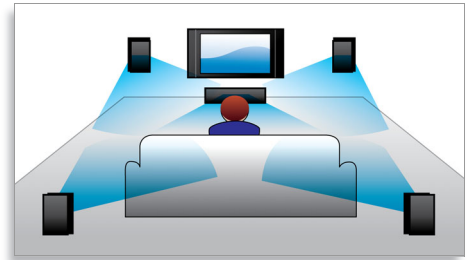


5.1 channel audio output for surround sound

Create MP3s

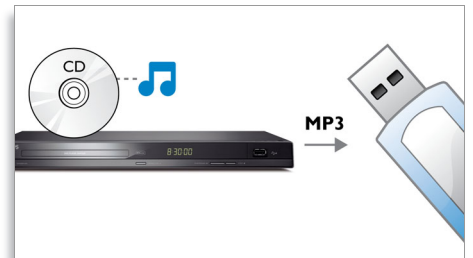

Convert the contents of your favourite CDs to MP3 files on your Philips product and store them directly on a thumb drive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC and even while the CD is playing.

Hi-Speed USB 2.0 Link

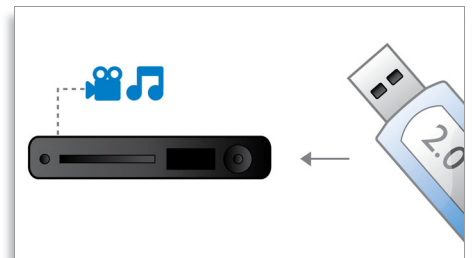

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 65 dB
- Crosstalk (1 kHz): 70 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital, DTS

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Flip photos, Rotate, Zoom,

Slideshow

Connectivity

- Rear Connections: Digital coaxial out, Composite video (CVBS) output, ComponentVideo out Progressive, Analogue audio multi-channel out
- Front/Side connections: USB, Microphone

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Polish, Russian

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: <1 W

Accessories

- Included Accessories: Audio/Video cable, 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User Manual

Dimensions

- Set dimensions (W x H x D): 435 x 38 x 210 mm
- Packaging dimensions (W x H x D): 490 x 82 x 296 mm
- Set weight: 1.74 kg

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3



Issue date 2009-05-05

Version: 1.0.6

12 NC: 8670 000 36073
EAN: 87 12581 38736 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com