

Philips
Combo phone

X200

1.6" display/ blue backlight
Speakerphone
2 handsets

X200B



Your family phone

Reliable connection and freedom of movement

A combination of corded base and additional cordless handset brings you convenience and piece of mind. Cordless handset allows freedom of movement while corded base works even during power cuts.

Reliable and simple

- Reliable connection even during power cuts
- Freestanding handset with a speaker for easy handsfree calls
- Direct volume control on the base
- Intercom between the base and an extra handset
- Privacy protection with silence mode and mute mode
- Easy to read display with backlight
- AOH / Caller ID – so you always know who is calling*

Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Automatic Volume Control offsets unwanted volume variation


Durable and comfortable

- Textured back cover for non-slip grip
- Durable design and build to last

PHILIPS

Highlights

Automatic Volume Control

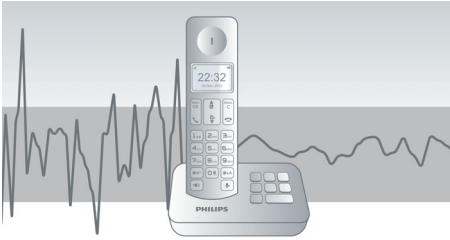

Automatic Volume Control offsets variations in sound signal, which can be caused by distance, signal strength or the caller's phone - so what you hear always remains consistent. Reducing the audio amplification for strong signals, and increasing it for weak ones, it means you can enjoy a smooth conversation without unwanted sound volume variation.

Pure and clear sound

Parametric Equalizer delivers pure and clear sound

AOH / Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Direct volume control

Direct volume control on the base allows you to easily adjust the sound level during the call.

Durable design

Durable design and build to last

Easy to read display

Easy to read display with backlight

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Intercom

Intercom between the base and an extra handset

Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

Silence mode and mute mode

Value your privacy and quiet at home? Easily disable the ringtones for specific "no call" times to enjoy piece and silence. Thanks to the mute mode you can have a private discussion which the caller will not be able to hear.

Works even during power cuts

If you suffer from frequent power cuts in your area this phone is something you will appreciate. It allows you to make and receive calls even during power cuts. Just use the corded base and stay connected at any time.

Specifications

Picture/Display

- Display size: Handset: 4.1cm / 1.6"; Combo base 5.3cm/ 2.1"
- Display type: 1-line dot matrix + 2 line icons
- Backlight: Yes
- Backlight color: Blue

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Call log entries: 20 entries
- Phonebook store in the base

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic

Convenience

- Speakerphone - talk handsfree
- Menu structure in the handset: List Menu
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Date / Time display
- Base Station keys: Paging key
- Battery charge indication
- Signal strength indication
- Programmable hot keys: Key 1 and 2
- Auto hang up
- Key tone on/off
- Call Management: Call Waiting*, Microphone mute, Missed Calls, Received Calls, AOH/ Caller ID
- Multi base capability: 1
- Multi handset capability: Up to 4
- Intercom - multiple handsets
- Line cord length: 1.8m
- Power cord length: 1.8m
- Charge time: 8 hours
- Up to 16 hrs talk time
- Up to 250 hrs standby time
- Range: Open field <300m; indoor <50m
- Non-slip grip: Circular texture
- Keypad lock

Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: <0.7 W

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic

Packaging dimensions

- Packaging dimensions (W x H x D): 23,3 x 17,8 x 11 cm
- Nett weight: 0,9906 kg
- Gross weight: 1,224 kg
- Tare weight: 0,2334 kg
- Number of products included: 1
- Packaging type: Dummy
- EAN: 87 12581 68657 4
- Type of shelf placement: Dummy



Issue date 2015-01-23

Version: 2.0.5

12 NC: 8670 001 02641
EAN: 87 12581 68657 4

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com