



Philips
Car audio video system

8.9 cm (3.5") touchscreen
Bluetooth
DVD

CED370



Seamless music and video enjoyment on the road

Philips' CED370 features an 8.9 cm (3.5") wide (16:9) LCD display for video and photo playback for ultimate entertainment in your car. Also enjoy movies and music from multiple sources and never miss a call due to its built-in Bluetooth® receiver.

Enrich your AV entertainment experience

- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback
- MP3 Link for portable music playback
- AV-IN for portable video and music playback

Superb performance with full features

- 3-band parametric equalizer with 8 presets
- Built-in 50 W x 4 amplifiers for excellent sound quality
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- Rear-view camera mode for safety when reversing
- Dual video outputs for entertainment in rear seats

Design that blends into your car

- Detachable flip-down front panel for anti-theft security

PHILIPS

Car audio video system
8.9 cm (3.5") touchscreen Bluetooth, DVD

CED370/00

Highlights

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

Detachable front panel



Detachable flip-down front panel for anti-theft security

MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media

players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Super anti-shock protection

Super anti-shock protection for smooth music enjoyment

USB Direct and SDHC card slots

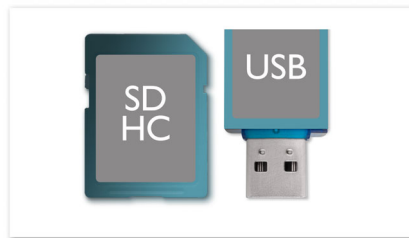

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving so you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also

conveniently stream your music files from your phone to your car entertainment system.

Perfect-fit 1.0 DIN chassis



Perfect-fit 1.0 DIN chassis design

Rear-view camera mode



Rear-view camera mode for safety when reversing

Dual video outputs

Dual video outputs for entertainment in rear seats



Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 3.5"
- Resolution: 320 (W) x 240 (H) x 3 (RGB)
- Aspect ratio: Widescreen
- Brightness: 350 cd/m²
- Contrast ratio (typical): 500 (typical)
- Effective viewing area: 76.84 x 43.20 mm
- Pixel pitch: 0.08 (W) x 0.180 (H)
- Key illumination: Blue/Red

Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD, USB flash drive
- Disc Playback Modes: A-B Repeat, Angle, Chapter repeat, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Resume Playback from Stop, Search forward/reverse, Still Picture, Zoom
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: Audio CD, CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA
- Disc Playback Modes: Fast Forward/Reverse, Introsan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320 kbps and variable bit rate
- USB Direct/SD Modes: Play/Pause, Fast Reverse/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18 (FM), 12 (AM)
- RDS: Station Name, Station Information, Radio Text, Programme Type, News and Traffic, RDS Clock Set

Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50 W x 4 channels
- Output power (RMS): 22 W x 4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- MP3-Link: For portable MP3 music playback
- Video Output - Analogue: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: x 1 (With gain control)
- AV input: Composite (CVBS) x 1
- Bluetooth profiles: A2DP, AVRCP, Hands-free
- Bluetooth version: 2.0
- Navigation ready: Yes (Navigation box sold separately)
- Parking camera input: Yes (Switched on automatically when the car is in reverse)

Security/Anti-theft

- Front panel: Detachable and flip-down
- Display blackout: 10/20 sec selectable

Accessories

- Remote control: Slim remote with battery
- User Manual: English, Spanish, Traditional Chinese
- Quick start guide: English, Spanish, Traditional Chinese

Power

- Power supply: 12 V DC

Dimensions

- Product dimensions (W x H x D): 188 x 58 x 193 mm
- Chassis: 1 Din



Issue date 2013-12-02

Version: 2.0.1

12 NC: 8670 000 65146
EAN: 69 23410 70285 9

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com