



Philips
Mini Hi-Fi System

330W



FWM3500

Powerful, clear and magnificent sound

Obsessed with sound

Let the power rip with Philips Mini hi-fi system featuring 330W RMS and 4000W PMPO power output, and USB Rip-plus. Go on and rip music from CDs, radio or karaoke onto your USB device. Keeps the music - and you - going strong!

Powerful sound you can hear and feel

- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- 4000W PMPO/ 330W RMS total output power

Multiple source MP3 music

- Rip music from CDs, radio and karaoke onto USB device
- MP3 Link for portable music playback
- Enjoy MP3 music directly from your portable USB devices
- Compatible with MP3-CD
- Optional dock for convenient playback from your iPod/iPhone

Convenient and easy to use

- Connection for TV or DVD player
- Digital tuning with preset stations for extra convenience

Be a singing sensation

- Karaoke for endless singing entertainment

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Karaoke



The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allow you to choose the optimal key for your personal vocal range.

Rip music onto USB device

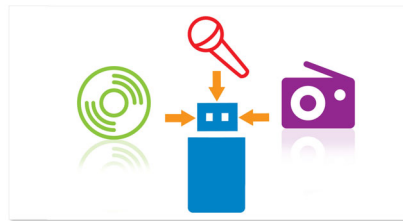

Rip music from CDs, radio and karaoke onto USB device

Optional dock



Attach this dock to your home theater system and you can enjoy your music, videos and pictures from your iPod devices and iPhone. Dock is sold as an optional accessory.



Issue date 2014-03-14

Version: 1.0.4

12 NC: 8670 000 96324
EAN: 00 60958 52297 85

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

Specifications

Sound

- Total Sound Power (RMS): 330 W
- Output power: 4000 W PMPO
- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, digital sound control 4 modes, incredible surround, virtual ambience control, UniSound

Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 2" tweeter, 6.5" woofer
- Loudspeaker enhancement: 3-way
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Audio recording

- Recording media: USB device
- USB recording modes: instant record, programmed tracks, schedule radio program, single disc, single track
- USB recording sources: AUX, CD, tuner, microphone in

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: MW, FM
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Connectivity

- Microphone: dual microphone sockets
- MP3 Link: 3.5mm stereo line in
- USB: USB host
- PC in (Aux in): 2 x RCA (Audio)

Convenience

- Alarms: CD alarm, USB alarm, radio alarm
- Number of discs: 1
- Clock: on main display, sleep timer
- Display type: LCD display
- Karaoke: MIC volume, echo control

Accessories

- Cables/Connection: *Flat pin adaptor, MP3 Link cable, power cord
- Remote control: 28-key with 2xAAA batteries
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 18 kg
- Main speaker dimensions (W x D): 265 x 380 mm
- Main speaker height: 322 mm
- Main unit width: 232 mm
- Main unit depth: 307 mm
- Main unit height: 372 mm
- Packaging width: 977 mm
- Packaging depth: 373 mm
- Packaging height: 440 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz

* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.