

Specifications are subject to change without notice. Electronics N.V. or their respective owners.

Register your product and get support at www.philips.com/welcome

Docking Entertainment System



What's in the box









Remote control

MP3 link cable

User Manual **Ouick Start Guide**

Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy










1 Connect the AC power cord to the wall outlet.





2 Setup

A Set time and date

- 1 In standby mode, press and hold **SET** TIME/PROG for 2 seconds
 - → [24 HR] begins to blink.
- 2 Press OK/ II to select the 12/24 hour format
- 3 Press SET TIME/PROG to confirm. → The hour digits begin to blink.
- 4 Press ►/► to set the hour
- 5 Press SET TIME/PROG to confirm. → The minute digits begin to blink.
- 6 Repeat steps 4-5 to set the minute. year, month, and day.

B Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly.
- 2 Press and hold ALM 1 or ALM 2 for 2 seconds.

2 Setup

→ 「AL 11 or 「AL 21 begin to blink.

3 Press SOURCE on the top panel to

iPhone FM tuner or buzzer

4 Press AIM 1 or AIM 2

select an alarm sound source: iPod/

→ The hour digits begin to blink.

→ The minute digits begin to blink.

5 Press I ✓ ► I repeatedly to set the hour.

6 Press AI M 1 or AI M 2 to confirm

7 Repeat steps 5-6 to set the minute.

weekdays, or at weekend.

(A) Tip

iPhone/iPod.

8 Repeat steps 5-6 to select whether

to ring alarm the whole week, on

9 Repeat steps 5-6 to set the alarm volume.

If you set iPhone/iPod playlist as the sound

called "PHILIPS" and import it to your

• If no playlist is created in the iPod/iPhone

will wake to songs in the iPod/iPhone.

or there is no song in the playlist, the unit

source, you must create a playlist in iTunes

3 Enjoy

Activate and deactivate the alarm timer

- 1 Press ALM 1 or ALM 2 repeatedly to activate or deactivate the timer
- → If the timer is activated, [♣ AL 1] or [AL2] is displayed.
- → If the timer is deactivated, [♣ AL1] or [AL21 disappears.

Repeat alarm

- 1 When the alarm rings, press BRIGHTNESS/REP ALM
- → The alarm repeats ringing minutes later.

CO Tip

→ You can press I lto adjust the interval to repeat alarm.

Stop alarm ring


- 1 When the alarm rings, press the corresponding ALM 1 or ALM 2.
- → The alarm stops but the alarm settings remain.

A Play from iPod/iPhone

1 Lift up the iPhone/iPod dock on the top panel.



2 Place the iPhone/iPod into the dock

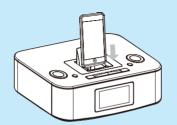

3 Press iPhone/iPod to select iPod/ iPhone source

3 Enjoy

- → The connected iPod/iPhone plays automatically.
- To pause/resume play. press OK/>II.
- To skip to a track. press | **◄/▶**|.
- To search during play. press and hold $\blacktriangleleft \blacktriangleleft / \blacktriangleright \blacktriangleright$. then release to resume normal play.
- To go back to the previous iPod/iPhone menu, press MENU. To scroll through the menu, press |
- To confirm a selection press OK/►II.
 - ☐ If no key is pressed for more than 10 seconds. OK/►II acts back as the play/pause key.

B Program and listen to radio stations

- In the tuner mode, press and hold SET TIME/PROG for more than 2 seconds to activate automatic program mode.
- → [AUTO] (auto) is displayed.
- → All available stations are programmed in the order of waveband reception strength.
- → The first programmed radio station is broadcast automatically.
- 2 Press I√►I to select a preset number.

CO Tip

· Detailed functions and features are described in the user manual.