

Philips 7000 series
Blu-ray Disc player

3D playback

WiFi-Ready Black aluminum

BDP7500B2



Design and performance, purely defined

Revel in the most realistic HD audio ever with this high performance aluminum design and 7.1 audio outputs. Redefine the way you watch Blu-ray movies with CinemaPerfect HD. Be ready for Wi-Fi and enjoy your PC videos via DLNA.

See more

- Full HD 3D Ready* for a truly immersive 3D movie experience
- CinemaPerfect HD for clearer and sharper video playback
- DivX Plus HD Certified for high definition DivX playback
- Net TV for popular online services on your TV
- DLNA Network Link to enjoy photos and videos from your PC
- Subtitle Shift for widescreen without any missing subtitles

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound
- 7.1 channel surround sound for the best cinematic experience

Engage more

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Built-in 1GB BD-Live memory for online Blu-ray bonus content
- Touch-sensitive controls for smooth and easy access
- EasyLink to control all HDMI CEC devices via a single remote



asimpleswitch.com

asimpleswitch.com

PHILIPS

sense and simplicity

Highlights

Full HD 3D Ready



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the Full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide and high quality content selection. The Blu-ray 3D feature will be available on this system after software upgrade (visit www.philips.com/blu-ray).

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Net TV




Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online contents directly on your TV via the Philips Blu-ray Disc player whenever you like. Simply connect the player directly to your home network through a wired or wireless connection, then navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

DLNA Network Link



The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that assures that DLNA certified products will work together seamlessly. By connecting your Blu-ray Disc player to your home network, you will be able to access information from all DLNA certified devices. You can access your world of entertainment at a simple push of a button with the intuitive user interface, that is designed for easy browsing.

Subtitle Shift

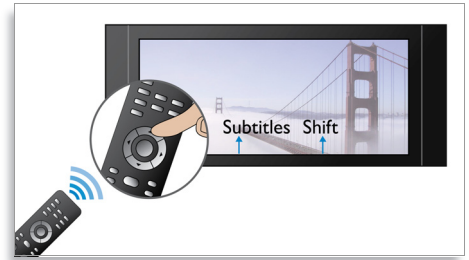

Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off. In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Picture/Display

- Aspect ratio: 21:9, 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12 bit / 150MHz
- Blu-ray 3D: Full HD 1080p
- Advanced video processing: CinemaPerfect HD

Video Playback

- Playback Media: BD Video, BD-R/RE 2.0, DVD, DVD-Video, DVD-R/-RW, DVD+R/+RW, DivX, CD, CD-R/CD-RW, USB flash drive, BD-ROM, Video CD/SVCD
- Compression formats: H.264, VC-1, MPEG2, XviD, DivX Plus™ HD, MKV, AVCHD, WMV
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Color, Video Upscaling, Progressive Scan
- BD Region Code: A
- DVD Region Code: 3

Sound

- Sound System: DTS-HD Master Audio, Dolby True HD, Dolby Digital Plus, DTS, Dolby Digital
- Signal to noise ratio: 105 dB
- Dynamic Range (1kHz): 100 dB
- Frequency response: 100 Hz
- D/A converter: 24 bit, 192 kHz

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, MP3, PCM, WMA, AAC (multi-channels)

Digital Photo Playback

- Playback Media: USB flash drive, DVD+R/+RW, DVD-R/-RW, CD-R/RW
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution, Slideshow, Slideshow with MP3 playback, Rotate, Zoom

Connectivity

- Rear Connections: HDMI output, Component Video output, Digital optical out, Composite video (CVBS) output, Digital coaxial out, Analog audio 7.1 channel out, Analog audio Left/Right out, Ethernet, USB: Philips WiFi adaptor only
- Front / Side connections: USB 2.0
- Network connections: Wi-Fi Ready (802.11 g/n)*
- PC network link: DLNA 1.5 certified

Convenience

- Online services: Net TV
- Ease of Use: Touch control buttons
- EasyLink (HDMI-CEC): One touch play, One touch standby
- Child Protection: Parental Control
- On-Screen Display languages: Traditional Chinese, English
- BD-Live (Internal 1GB memory)
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

Accessories

- Included accessories: HDMI cable, Audio/Video cable, User Manual, Quick start guide, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: English, Traditional Chinese

Power

- Power supply: 220-240V, 50/60 Hz
- Power consumption: 22 W
- Standby power consumption: 0.25W

Dimensions

- Packaging dimensions (W x H x D): 509 x 118 x 285 mm
- Weight incl. Packaging: 3.60 kg
- Product dimensions (W x H x D): 435 x 55.7 x 245 mm
- Product weight: 2.85 kg

Green Specifications

- Certified green product



Issue date 2013-02-12

Version: 3.0.5

12 NC: 8670 000 60744
EAN: 87 12581 52921 5

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Philips Wi-Fi USB adaptor WUB1110 required (sold separately)
* For more information, visit www.philips.com/blu-ray