



Philips PixelPop  
wireless portable speaker

## Bluetooth®

Splash-proof  
By-packed strap  
8hrs, rechargeable battery



BT110R

## Small size, big bass

This compact BT110 has all the acoustic essentials that normally come only with a big speaker. That's why it sounds clear and loud with surprising good bass. Oh, it's also splash proof and has a strap. It's ready anytime, anywhere.

### Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion-free music
- Passive radiator for better low frequency performance

### Designed for grab and go

- Built-in rechargeable battery for music playback anywhere
- Splash-proof design ideal for outdoor use (IPX4)
- Carry it anywhere with the by-packed finely knitted strap

### Simplicity in use


- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth

# PHILIPS

wireless portable speaker  
Bluetooth® Splash-proof, By-packed strap, 8hrs, rechargeable battery


# Highlights

## Wireless music streaming

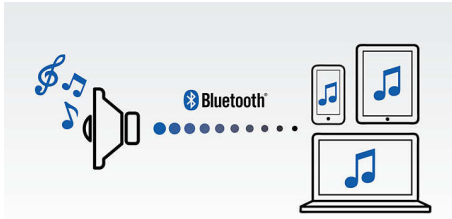

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Anti-clipping function

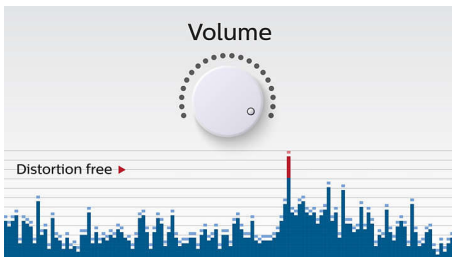


Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

## Splash-proof design




Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, allowing for music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

## by-packed finely knitted strap

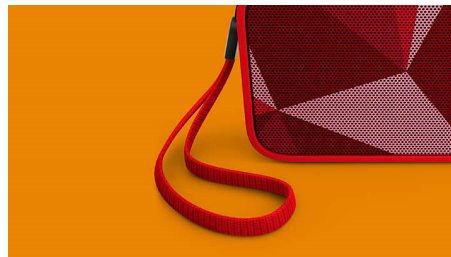

Our by-packed strap is made of a vibrant and finely knitted fabric sleeve making it stylish enough to be a fashion accessory.

## Built-in microphone

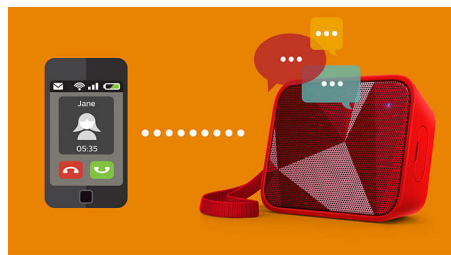

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting.

BT110R/00

Or, call your friend from a party. Either way, it works great.

## Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

## Audio-in



Audio-in for easy connection to almost any electronic device

## Advanced audio performance

Advanced audio performance with a compact design

## Passive radiator

Passive radiator for better low frequency performance

wireless portable speaker  
Bluetooth® Splash-proof, By-packed strap, 8hrs, rechargeable battery

BT110R/00

# Specifications

## Sound

- Output power (RMS): 4 W
- Sound System: Mono
- Speakers: 1 x 38.1-mm (1.5") full range driver and passive radiator

## Design and finishing

- Colour: Red

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 20 m or 66 ft
- Audio in (3.5 mm)
- USB charging

## Convenience

- Splash-proof: IPX 4
- Built-in microphone: for speaker conference

## Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with

## Retina display

- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

## Power

- Battery type: lithium (built-in)
- Operating time on battery: 8 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide, carrying strap

## Dimensions

- Weight incl. Packaging: 0.25 kg
- Product dimensions (WxDxH): 98 x 35 x 77 (7.2" x 3.2" x 3.4") mm
- Packaging dimensions (WxDxH): 108 x 84 x 145 mm (9.2" x 3.7" x 3.8")
- Product weight: 0.15 kg



Issue date 2024-03-24

Version: 3.1.6

EAN: 48 95185 62007 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)