




Philips
Portable DVD Player

18cm/ 7" LCD
5-hr playtime

PD7040

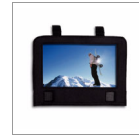

Longer movies enjoyment on the go

with USB for digital media playback

Enjoy your movies anytime, anyplace! The PD7040 portable DVD player features 7"/ 18cm LCD swivel screen for your great viewing experience. You can indulge in up to 5 hours of DVD/DivX®/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 7" swivel color LCD panel for improved viewing flexibility
- Enjoy movies in 16:9 widescreen format
- Built-in stereo speakers

Extra touches for your convenience

- Up to 5-hour playback with a built-in battery*
- USB Direct for music and photo playback
- Car mount pouch included for easy in-car use
- Full Resume on Power Loss
- AC adaptor, car adaptor and AV cable included



asimpleswitch.com

PHILIPS

Highlights

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

5-hour built-in battery*

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

Car mount pouch

Mount your portable DVD player easily to your car headrest. You can enjoy DVD movies on the road.

18cm/7" swivel color LCD panel

7" swivel color LCD panel for improved viewing flexibility

USB Direct



Simply plug in your USB device on the system and share your stored digital music and photos with your family and friends.

DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play

where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 1

- AV output: Composite (CVBS) x1
- USB

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adaptor: DC 9V, 0.8A, 110-240v, 50/60Hz
- Cables: 1 x AV adaptor
- Remote control: AY5521 slim remote
- User Manual: Multi Languages
- Car kit: cigarette outlet adaptor, 12vDC
- Pouch: Car seat mounting pouch

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs*

Dimensions

- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.9 kg
- Packaging dimensions (W x H x D): 235 x 255 x 70 mm
- Product dimensions (W x H x D): 195 x 39 x 153 mm
- Product weight: 0.77 kg
- Packaging type: D-box



Issue date 2017-04-05

Version: 1.1.4

12 NC: 8670 000 59225
EAN: 87 12581 52053 3

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.