



Philips
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

Miracast™
DivX Plus HD
Built-in WiFi



BDP2285

Immerse in 3D and wireless online entertainment

3D Blu-ray playback

Stunning 3D effect in picture depth and action that both leap off the screen, and draw you deep into the experience. Enjoy the best of internet on your TV with YouTube and Miracast.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles
- Access your favorite YouTube videos & Picasa photos easily
- Unleash your Miracast™- certified device content on your TV

Hear more

- Dolby TrueHD for high fidelity sound

Engage more

- USB 2.0 plays video/music from USB flash/hard disk drive
- Built-in WiFi-n for faster, wider wireless performance
- EasyLink to control all HDMI CEC devices via a single remote
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content

PHILIPS

Highlights

Blu-ray 3D Disc playback




Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Dolby TrueHD

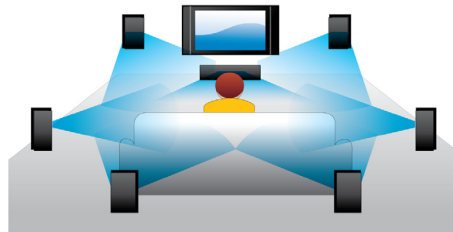

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar

speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Subtitle Shift

Subtitle Shift is an enhancement feature that lets users manually adjust a movie's subtitle positioning on the television or computer screen. Using the remote control, users can shift the subtitles up and down on the screen. On widescreen displays, such as 21:9 cinema and projectors, the subtitles sometimes get cut off. In order to see them clearly, the user has to change the display aspect ratio, which defeats the purpose of the widescreen. With the Subtitle Shift feature, the user can retain the correct display aspect ratio and have the subtitles ideally positioned on the screen.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual, HDMI cable
- User Manual: English, Traditional Chinese, Thai

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: A
- DVD Region Code: 3
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, XviD, MPEG4 (AVC)
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: English
- Online services: Picasa, YouTube

Dimensions

- Product (W x H x D): 310 x 40 x 203 mm

- Product weight: 1.25 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Weight incl. Packaging: 2.0 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

Power

- Power consumption: 11 W
- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 1W

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Packaging dimensions

- EAN: 87 12581 71902 9
- Packaging dimensions (W x H x D): 35.5 x 27.9 x 8.7 cm
- Packaging dimensions (W x H x D): 14.0 x 11.0 x 3.4 inch
- Gross weight: 1.56 kg
- Gross weight: 3.439 lb
- Nett weight: 1.2 kg
- Nett weight: 2.646 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.36 kg
- Tare weight: 0.794 lb
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 71902 9
- Gross weight: 3.439 lb
- Gross weight: 1.56 kg
- Outer carton (L x W x H): 14.0 x 11.0 x 3.4 inch
- Outer carton (L x W x H): 35.5 x 27.9 x 8.7 cm
- Nett weight: 2.646 lb
- Nett weight: 1.2 kg
- Number of consumer packagings: 1
- Tare weight: 0.794 lb
- Tare weight: 0.36 kg

Product dimensions

- Product dimensions (W x H x D): 13.8 x 10.6 x 3.4 inch
- Product dimensions (W x H x D): 35 x 27 x 8.7 cm
- Weight: 1 kg
- Weight: 2.205 lb



Issue date 2015-11-25

Version: 5.1.2

12 NC: 8670 001 13988
EAN: 08 71258 17190 29

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com